

KEY LOCK CYLINDERS


SECURITY AND LOCKS

21. Key Lock Cylinders

A: REPLACEMENT


1. FRONT DOOR

- 1) Remove the front outer handle. <Ref. to SL-31, REMOVAL, Front Outer Handle.>
- 2) Remove the rod clamp. Replace the key cylinder.

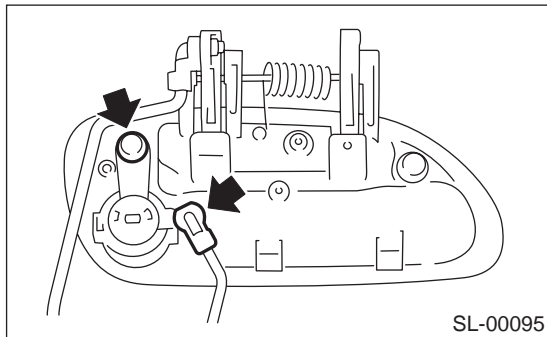

2. TRUNK LID

- 1) Remove the trunk trim. <Ref. to EI-49, REMOVAL, Trunk Trim.>
- 2) Remove the rod clamp. Remove the lock plate. Replace the key cylinder.

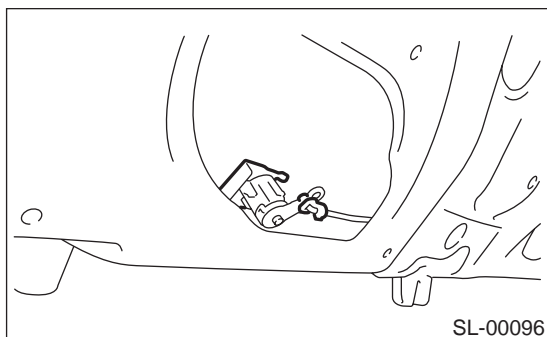

3. REAR GATE

- 1) Remove the rear gate lower trim. <Ref. to EI-47, REMOVAL, Rear Gate Trim.>
- 2) Remove the rod clamp. Remove the nut. Replace the key cylinder.

