


KEYLESS ENTRY CONTROL MODULE

SECURITY AND LOCKS

26. Keyless Entry Control Module

A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove glove box. <Ref. to EI-34, REMOVAL, Glove Box.>
- 3) Remove nut, then remove keyless entry control module (B) and the other electrical control module (A) while disconnecting connector.

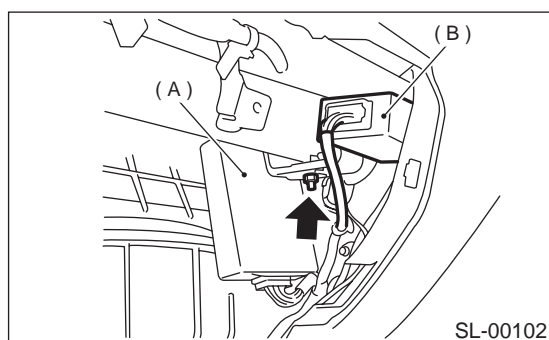

- 4) Disconnect keyless entry control module and the other electrical control module.

B: INSTALLATION

Install in the reverse order of removal.

SL-51