

## INTEGRATED MODULE


SECURITY AND LOCKS

---

### 27. Integrated Module

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-37, REMOVAL, Instrument Panel Assembly.>
- 3) Remove the nut, then remove the integrated module while disconnecting the connector.

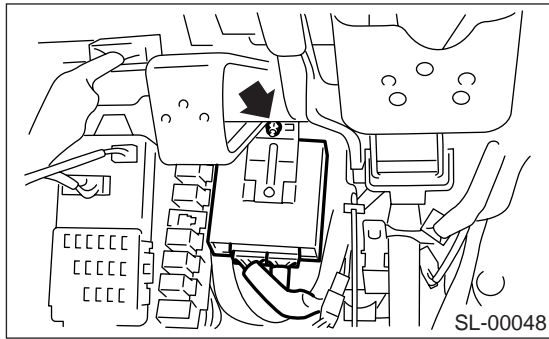

#### B: INSTALLATION

Install in the reverse order of removal.