


SUNROOF SWITCH

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

6. Sunroof Switch

A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove spot light lens (A) and sunroof switch mounting screw (B).

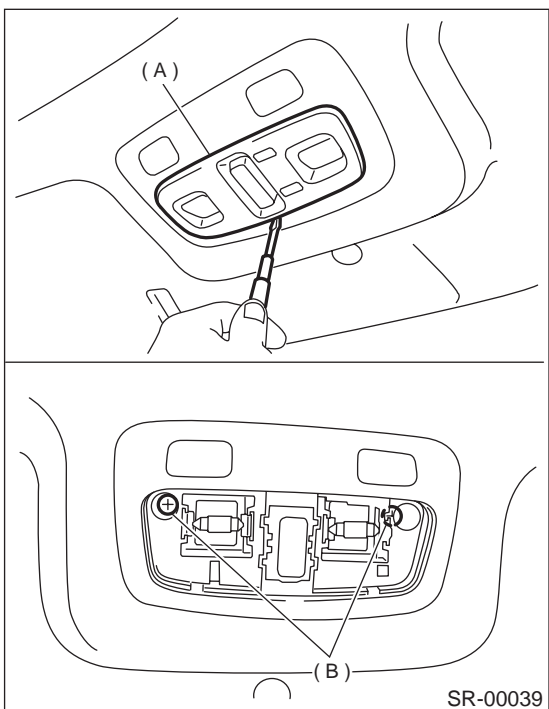

- 3) Disconnect harness connectors and remove sunroof switch.


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. SEDAN


Measure sunroof switch resistance.

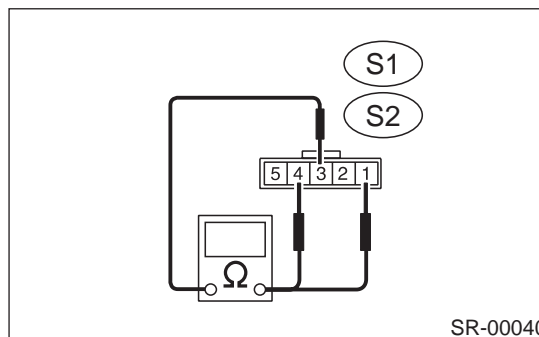

Switch position	Terminal No.	Standard
Open	S1: 3 and 4	Less than 1 Ω
Close	S1: 1 and 3	Less than 1 Ω
Tilt-up	S2: 3 and 4	Less than 1 Ω
Tilt-down	S2: 1 and 3	Less than 1 Ω

2. WAGON

Measure sunroof switch resistance.

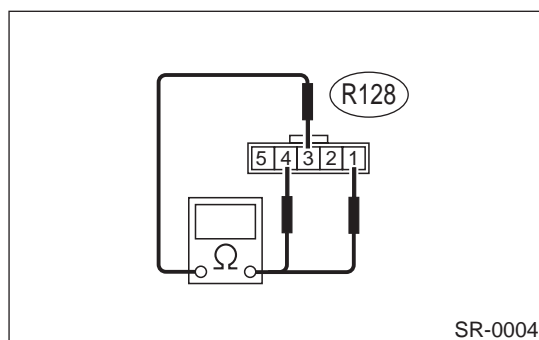

Switch position	Terminal No.	Standard
Open	3 and 4	Less than 1 Ω
Close	1 and 3	Less than 1 Ω