

CLEAR MEMORY MODE


ABS (DIAGNOSTICS)

9. Clear Memory Mode

A: OPERATION


1. WITHOUT SUBARU SELECT MONITOR

1) After calling up a diagnostic trouble code (DTC), disconnect diagnosis connector terminal 8 from diagnosis terminal.

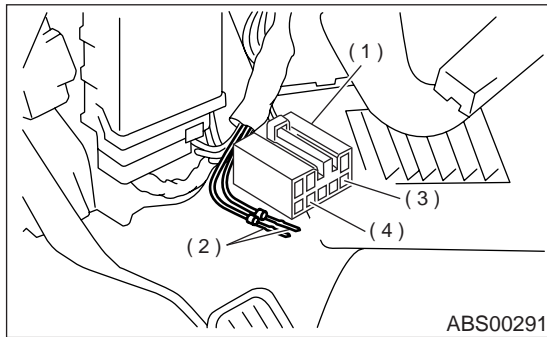

- (1) Diagnosis connector
- (2) Diagnosis terminal
- (3) 8 terminal
- (4) 5 terminal

2) Repeat 3 times within approx. 12 seconds; connecting and disconnecting terminal 8 and diagnosis terminal for at least 0.2 seconds each time.

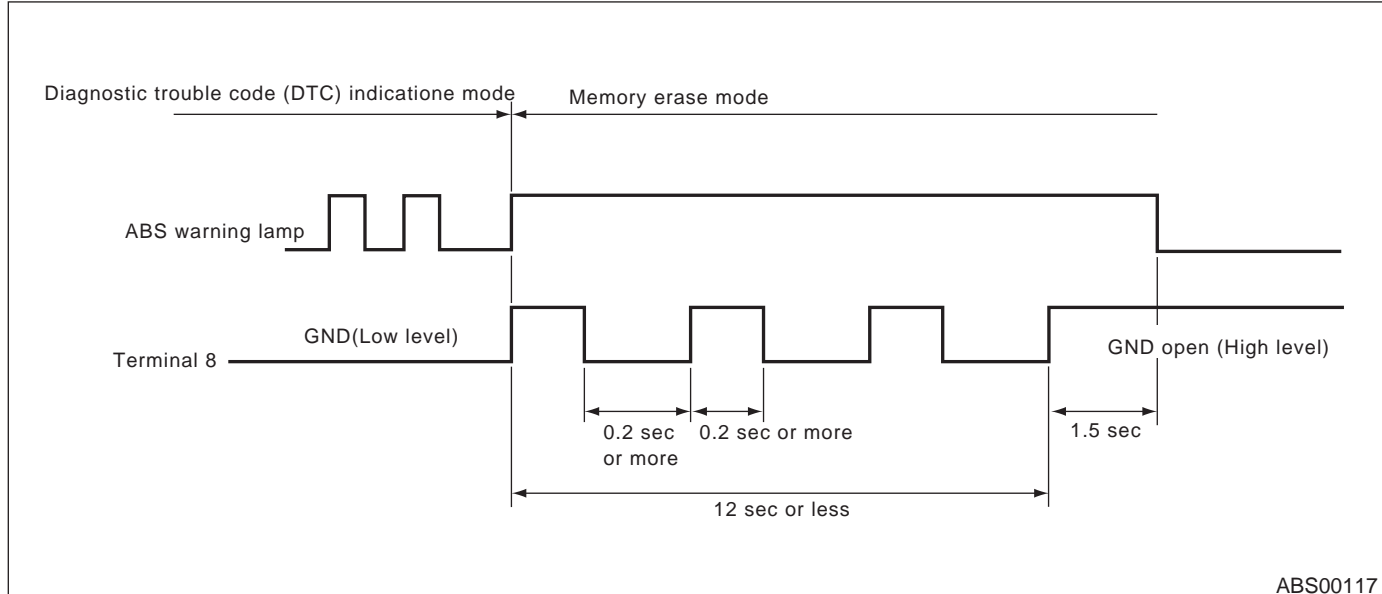

NOTE:

After diagnostics is completed, make sure to clear memory. Make sure only start code (11) is shown after memory is cleared.

2. WITH SUBARU SELECT MONITOR

Refer to SUBARU SELECT MONITOR for information about how to clear diagnostic trouble codes (DTC).
<Ref. to ABS-16, Subaru Select Monitor.>