

## FRONT TONE WHEEL

ABS

### 6. Front Tone Wheel

#### A: REMOVAL

Refer to Front Drive Shaft, because front tone wheel is integrated with front drive shaft.

<Ref. to DS-28, REMOVAL, Front Drive Shaft.>

#### B: INSTALLATION

Refer to Front Drive Shaft, because front tone wheel is integrated with front drive shaft.

<Ref. to DS-28, INSTALLATION, Front Drive Shaft.>

#### C: INSPECTION

Visually check tone wheels teeth (44 pieces) for cracks or dents. If necessary, replace tone wheel with a new one.

#### NOTE:

Replace BJ assembly with new one as a single unit if there are any defects found on tone wheel is unitized with BJ assembly of drive shaft.

ABS-19