

## BRAKE PIPE

### BRAKE

## 14.Brake Pipe

### A: REMOVAL

#### NOTE:

Airbag system wiring harness is routed near the center brake pipe.

#### CAUTION:

- All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
- Be careful not to damage airbag system wiring harness when servicing the center brake pipe.
- When removing the brake pipe, make sure that it is not bent.

### B: INSTALLATION

#### NOTE:

Airbag system wiring harness is routed near the center brake pipe.

#### CAUTION:

- All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
- Be careful not to damage airbag system wiring harness when servicing the center brake pipe.
- When installing the brake pipe, make sure that it is not bent.
- After installing the brake pipe and hose, bleed the air.
- After installing the brake hose, make sure that it does not touch the tire or suspension assembly, etc.

#### **Brake pipe tightening torque:**

**15 N·m (1.5 kgf·m, 10.8 ft·lb)**

### C: INSPECTION

Ensure there are no cracks, breakage, or damage on pipes. Check joints for fluid leakage. If any cracks, breakage, damage or leakage is found, repair or replace pipe.

#### NOTE:

Use a mirror when inspecting low-visible part or back side.

BR-38