

WHEEL ALIGNMENT

REAR SUSPENSION

2. Wheel Alignment

A: INSPECTION

NOTE:

The front and rear wheel alignment must be measured and/or adjusted at once to obtain accuracy.

Measure and/or adjust the rear wheel alignment together with the front.

Follow the procedure in "FS" section "Wheel Alignment" for measurement and/or adjustment of wheel alignment. <Ref. to FS-6, Wheel Alignment.>

RS-8

Vehicle-id:
SIE-id::A:Inspection