


## HELPER

REAR SUSPENSION

### 11.Helper

#### A: REMOVAL

- 1) Jack-up the rear part of the vehicle, support it with safety stands (rigid racks).
  - 2) Using ST, remove helper.
- ST 20099AE030 HELPER SOCKET WRENCH

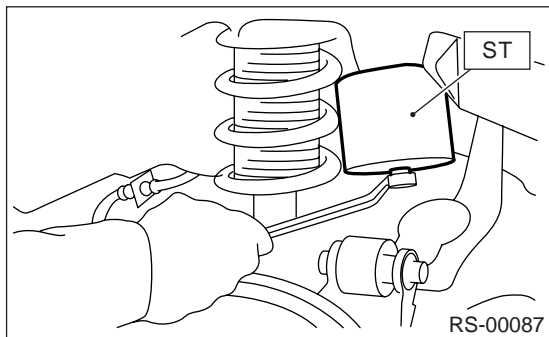

#### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**32 N·m (3.3 kgf·m, 24 ft·lb)**

#### C: INSPECTION

Check helper for cracks, fatigue or damage.

RS-23