

OIL SEAL

TRANSFER CASE

4. Oil Seal

A: NOTE

For removal, installation and inspection work, refer to "AT" section or "MT" section.

AT model:

<Ref. to AT-48, Extension Case Oil Seal.>

MT model:

<Ref. to MT-33, Oil Seal.>

TC-5

Vehicle-id:
SIE-id::A:Note