

## CLEAR MEMORY MODE

VDC (DIAGNOSTICS)


### 10. Clear Memory Mode

#### A: OPERATION


##### 1. WITHOUT SUBARU SELECT MONITOR

1) After calling up a diagnostic trouble code (DTC), disconnect diagnosis connector terminal 8 from diagnosis terminal.

2) Repeat 3 times within approx. 12 seconds; connecting and disconnecting terminal 8 and diagnosis terminal for at least 0.2 seconds each time.

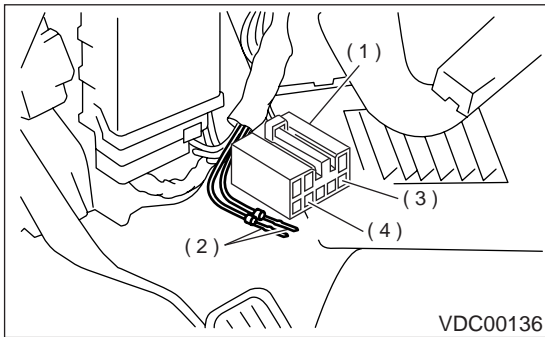

- (1) Diagnosis connector
- (2) Diagnosis terminal
- (3) 8 terminal
- (4) 5 terminal

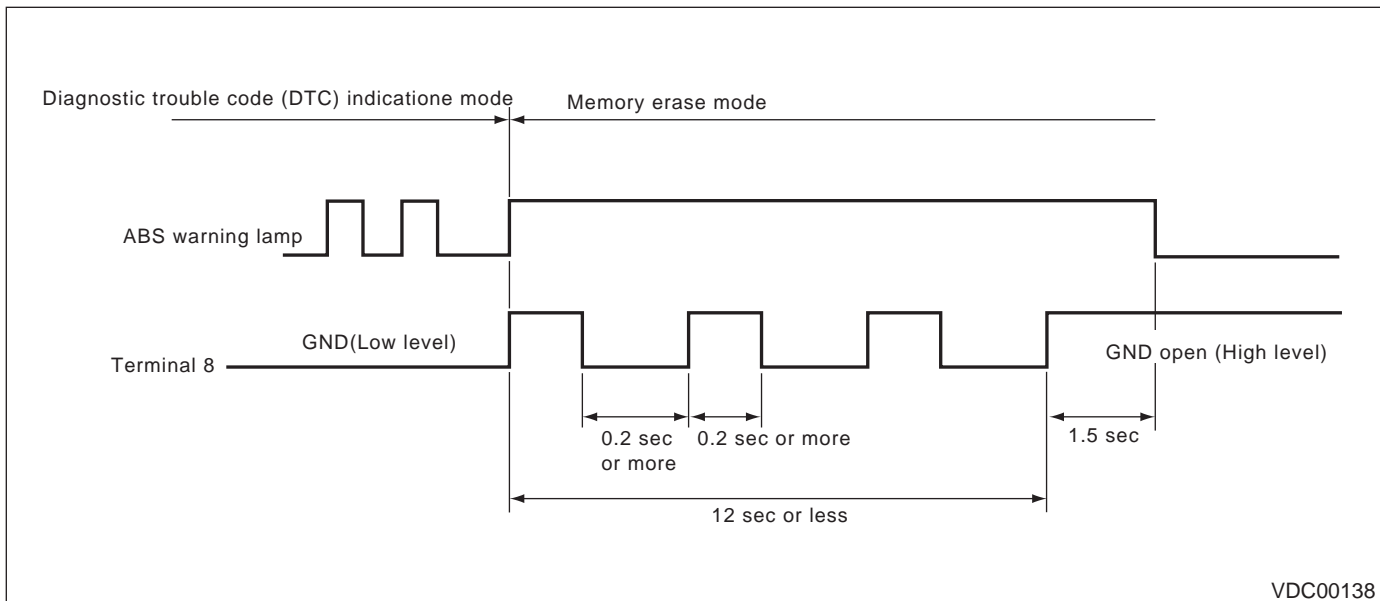

#### NOTE:

After diagnostics is completed, make sure to clear memory. Make sure only start code (11) is shown after memory is cleared.

##### 2. WITH SUBARU SELECT MONITOR

Refer to SUBARU SELECT MONITOR for information about how to clear diagnostic trouble codes (DTCs). <Ref. to VDC-20, Subaru Select Monitor.>

### VDC-25