

## “T-TYPE” TIRE

### WHEEL AND TIRE SYSTEM

---

## 6. “T-type” Tire

### A: NOTE

“T-type” tire for temporary use is prepared as a spare tire.

### CAUTION:

- Do not use a tire chain with the “T-type” tire. Because of the smaller tire size, a tire chain will not fit properly and will result in damage to the vehicle and the tire.
- Do not drive at a speed greater than 80 km/h (50 MPH).
- Drive as slowly as possible and avoid passing over bumps.

### B: REPLACEMENT

Refer to Removal and Installation of Steel Wheel for removal/installation of “T-type” tires. <Ref. to WT-5, Steel Wheel.>

### CAUTION:

Replace with a conventional tire as soon as possible since the “T-type” tire is only for temporary use.

### C: INSPECTION

1) Check tire inflation pressure.

#### Specification:

**420 kPa (4.2 kg/cm<sup>2</sup>, 60 psi)**

- 2) Take stones, glass, nails, etc. out of the tread groove.
- 3) Check tires for deformation, cracks, partial wear, or wear.

### CAUTION:

Replace the tire with a new one.

WT-8