


FULL WHEEL CAP

WHEEL AND TIRE SYSTEM

7. Full Wheel Cap

A: REMOVAL

Pry off the full wheel cap with a wheel cap remover inserted between openings in the cap.

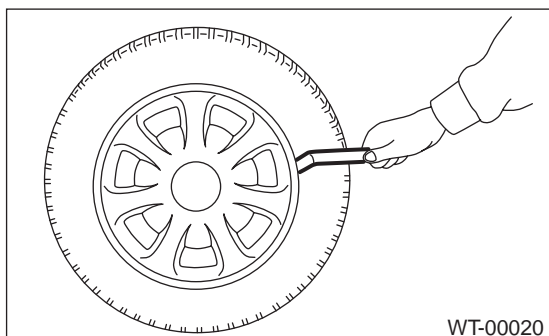

B: INSTALLATION

Align the valve hole in the wheel cap with the valve on the wheel and secure the wheel cap by tapping four points by hand.

C: INSPECTION

- 1) Check wheels for missing wheel caps.
- 2) Check pawls of wheel caps for damage or bend.
- 3) Check wheel caps for cracks.

WT-9