


## 11. Reservoir Tank

### A: REMOVAL

- 1) Disconnect overflow hose from radiator filler neck position.
- 2) Remove bolts which install reservoir tank onto radiator main fan shroud.
- 3) Remove reservoir tank.

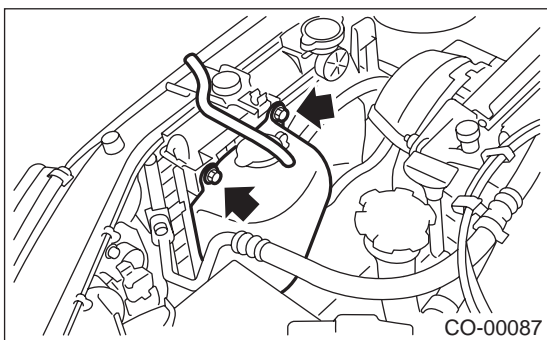


### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**4.9N-m (0.50 kgf-m, 3.6 ft-lb)**

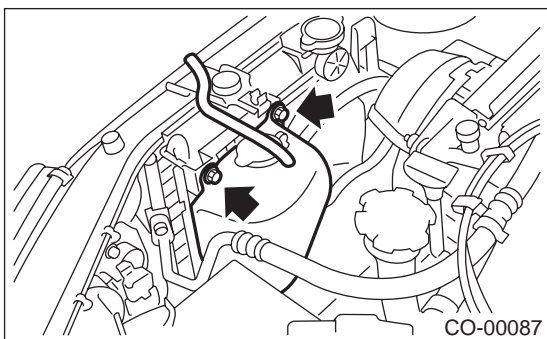

### C: INSPECTION

Make sure the engine coolant level is between full and low.