


FRONT CATALYTIC CONVERTER

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

2. Front Catalytic Converter


A: REMOVAL

The front and rear three-way catalysts and center exhaust pipe are integrated into one unit. Therefore, the removal procedure is the same as that for the center exhaust pipe. <Ref. to EX(H4SO)-8, REMOVAL, Center Exhaust Pipe.>

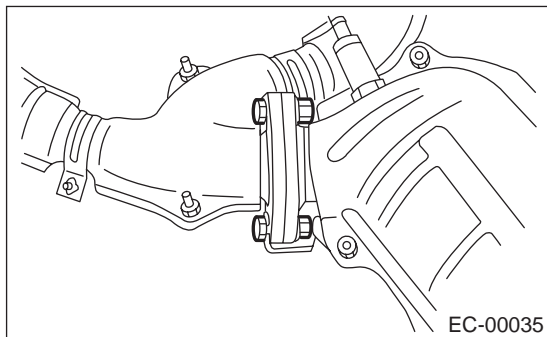

B: INSTALLATION

The front and rear three-way catalysts and center exhaust pipe are integrated into one unit. Therefore, the removal procedure is the same as that for the center exhaust pipe. <Ref. to EX(H4SO)-8, INSTALLATION, Center Exhaust Pipe.>

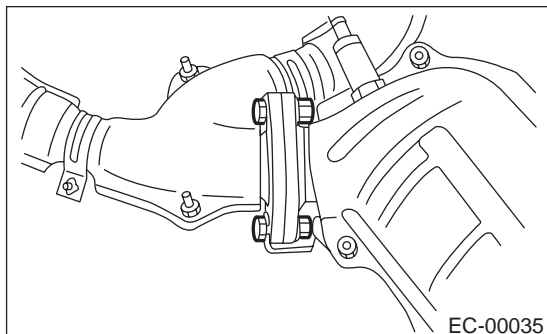

1) Install front and center exhaust pipes. <Ref. to EX(H4SO)-6, INSTALLATION, Front Exhaust Pipe.>

C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.