


## CANISTER

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


### 4. Canister

#### A: REMOVAL

- 1) Lift-up the vehicle.
- 2) Loosen two clamps which hold two canister hoses, and disconnect evaporation three hoses from canister.

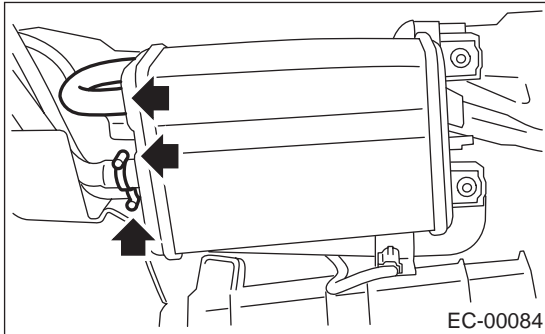

- 3) Remove canister from body.

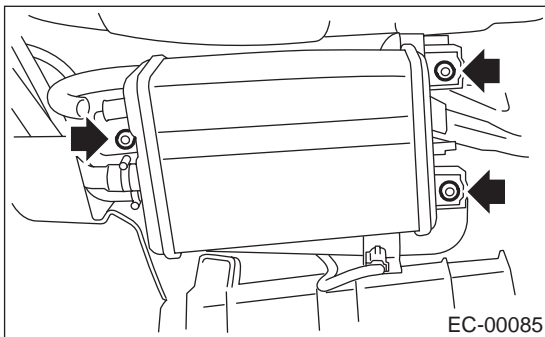


#### B: INSTALLATION

- 1) Install in the reverse order of removal.

##### **Tightening torque:**

**23 N·m (2.3 kgf-m, 17 ft-lb)**

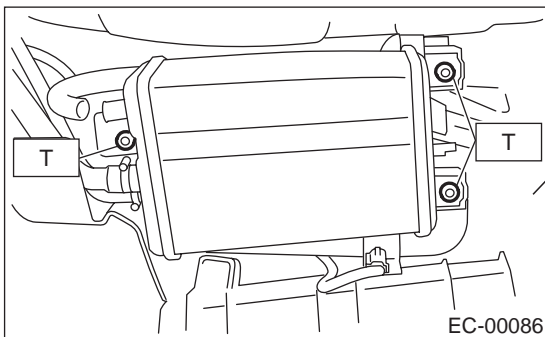

#### C: INSPECTION

Make sure the canister and canister hoses are not cracked or loose.