

EGR VALVE

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

6. EGR Valve

A: REMOVAL

For work procedures, refer to "FU(H4SO)" section.
<Ref. to FU(H4SO)-37, REMOVAL, EGR Valve.>

B: INSTALLATION

For work procedures, refer to "FU(H4SOH4SO)" section.
<Ref. to FU(H4SO)-37, INSTALLATION, EGR Valve.>