

MAIN FUEL LEVEL SENSOR

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

7. Main Fuel Level Sensor

A: REMOVAL

For work procedures, refer to "FU(H4SO)" section.
<Ref. to FU(H4SO)-71, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

For work procedures, refer to "FU(H4SO)" section.
<Ref. to FU(H4SO)-71, INSTALLATION, Fuel Level Sensor.>