

SUB FUEL LEVEL SENSOR

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

9. Sub Fuel Level Sensor

A: REMOVAL

For work procedures, refer to "FU(H4SO)" section.
<Ref. to FU(H4SO)-72, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

For work procedures, refer to "FU(H4SO)" section.
<Ref. to FU(H4SO)-73, INSTALLATION, Fuel Sub Level Sensor.>