


GENERAL DESCRIPTION

EXHAUST

1. General Description

A: COMPONENT

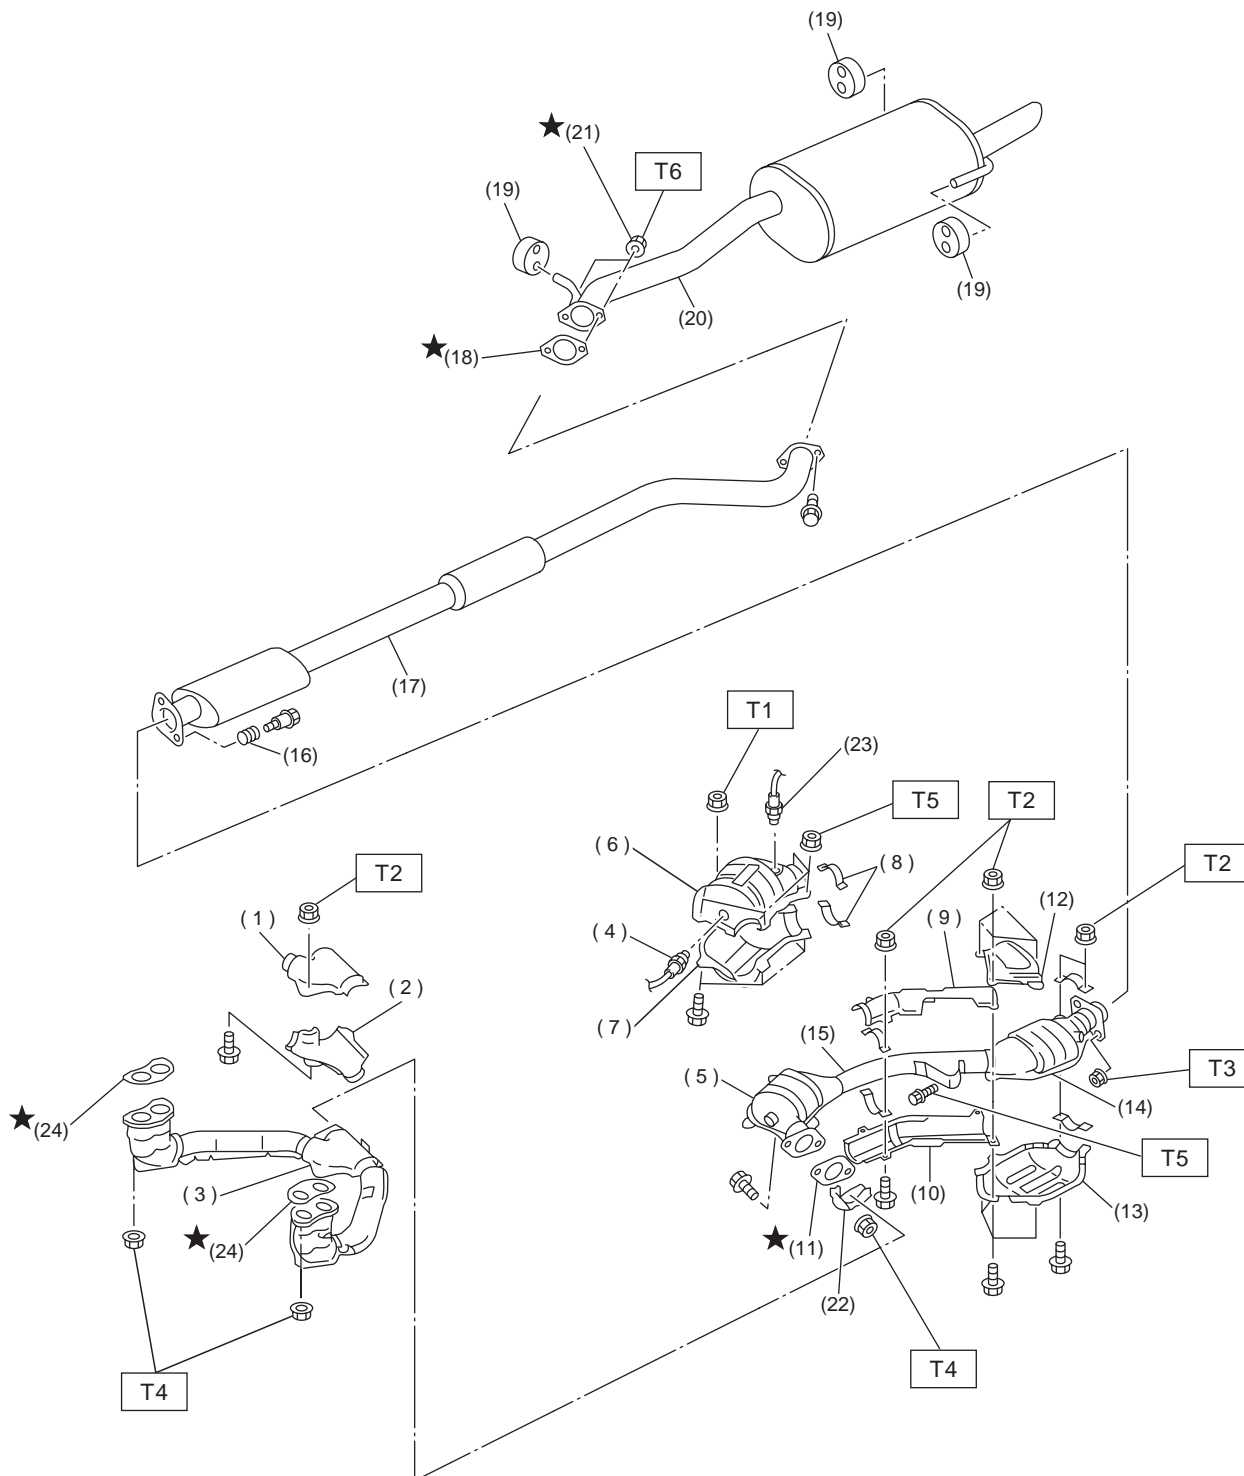

EX-00047

EX(H4SO)-2

GENERAL DESCRIPTION

EXHAUST

<p>(1) Upper front exhaust pipe cover CTR</p> <p>(2) Lower front exhaust pipe cover CTR</p> <p>(3) Front exhaust pipe</p> <p>(4) Front oxygen (A/F) sensor</p> <p>(5) Front catalytic converter</p> <p>(6) Upper front catalytic converter cover</p> <p>(7) Lower front catalytic converter cover</p> <p>(8) Clamp</p> <p>(9) Upper center exhaust pipe cover</p> <p>(10) Lower center exhaust pipe cover</p>	<p>(11) Gasket</p> <p>(12) Upper rear catalytic converter cover</p> <p>(13) Lower rear catalytic converter cover</p> <p>(14) Rear catalytic converter</p> <p>(15) Center exhaust pipe</p> <p>(16) Spring</p> <p>(17) Rear exhaust pipe</p> <p>(18) Gasket</p> <p>(19) Cushion rubber</p> <p>(20) Muffler</p> <p>(21) Self-locking nut</p> <p>(22) Protector</p>	<p>(23) Rear oxygen sensor</p> <p>(24) Gasket</p> <hr/> <p>Tightening torque: N·m (<i>kgf-m, ft-lb</i>)</p> <p>T1: 8 (0.8, 5.8)</p> <p>T2: 13 (1.3, 9.4)</p> <p>T3: 18 (1.8, 13.0)</p> <p>T4: 30 (3.1, 22.4)</p> <p>T5: 35 (3.6, 26.0)</p> <p>T6: 48 (4.9, 35.4)</p> <hr/>
---	---	---

EX(H4SO)-3

GENERAL DESCRIPTION

EXHAUST

B: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect ground cable from battery.