

REAR EXHAUST PIPE

EXHAUST


4. Rear Exhaust Pipe

A: REMOVAL

1) Separate rear exhaust pipe from center exhaust pipe.

CAUTION:


Be careful, exhaust pipe is hot.

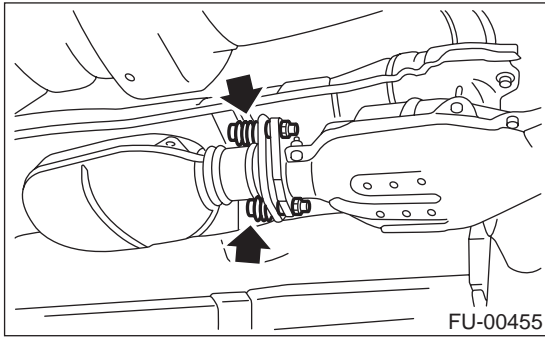

2) Separate rear exhaust pipe from muffler.

CAUTION:

Be careful not to pull down rear exhaust pipe.

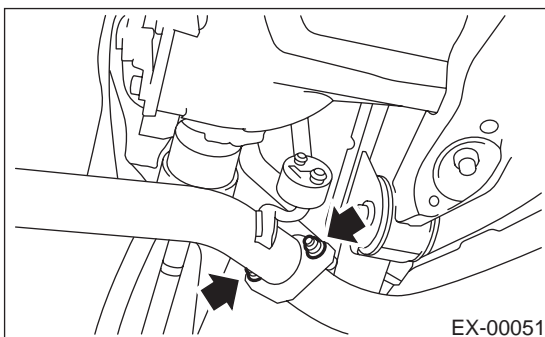

3) Remove rear exhaust pipe.

B: INSTALLATION


NOTE:

Replace gaskets and self-locking nuts with new ones.

1) Install rear exhaust pipe to muffler.

Tightening torque:


48 N·m (4.9 kgf·m, 35.4 ft·lb)

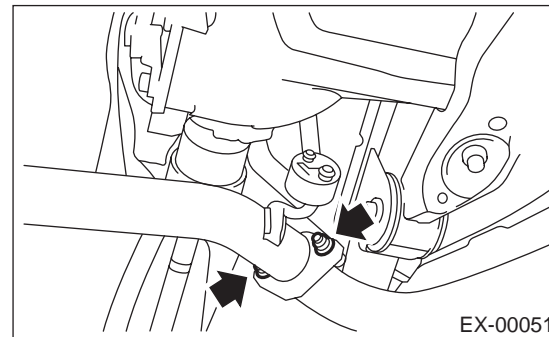

2) Install rear exhaust pipe to center exhaust pipe.

Tightening torque:

18 N·m (1.8 kgf·m, 13.0 ft·lb)

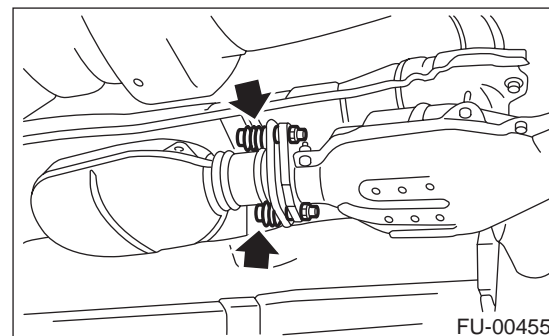

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.

2) Make sure there are no holes or rusting.

3) Make sure the cushion rubber is not worn or cracked.