


## PRESSURE SENSOR

FUEL INJECTION (FUEL SYSTEMS)


### 9. Pressure Sensor

#### A: REMOVAL


- 1) Disconnect battery ground cable.

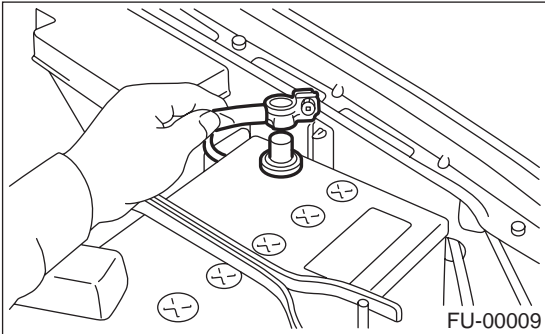

- 2) Disconnect connector from pressure sensor.

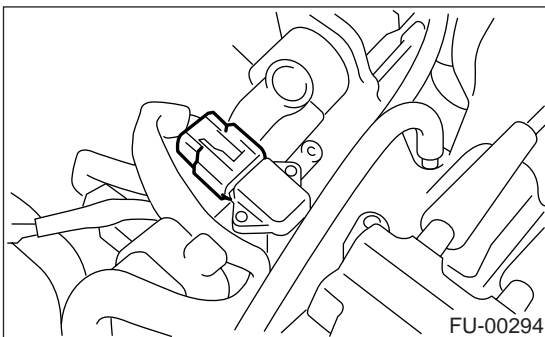

- 3) Remove pressure sensor.

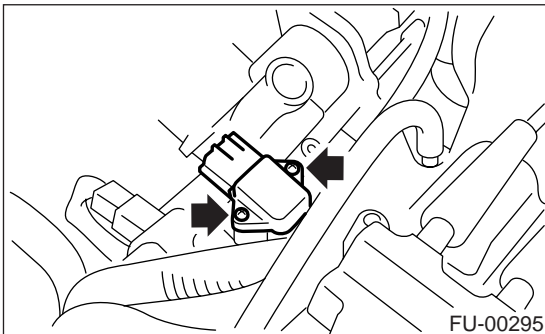


#### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**2.4 N·m (0.24 kgf-m, 1.7 ft-lb)**

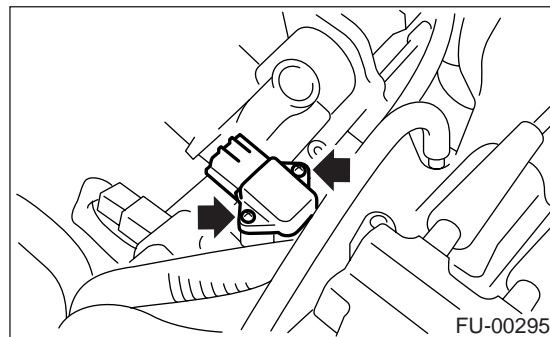

**NOTE:**

Replace O-ring with a new one.