


## EGR VALVE

FUEL INJECTION (FUEL SYSTEMS)


### 13.EGR Valve

#### A: REMOVAL


- 1) Disconnect battery ground cable.

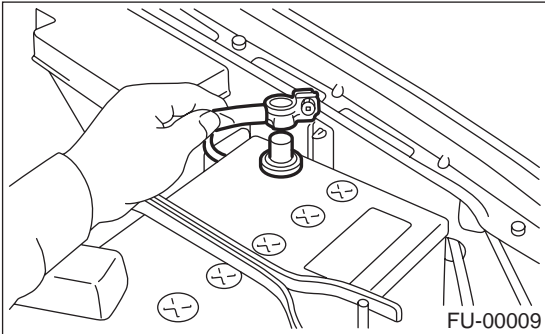

- 2) Disconnect connector from EGR valve.

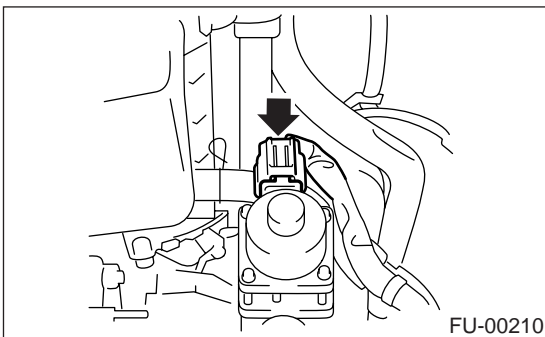

- 3) Remove EGR valve from intake manifold.

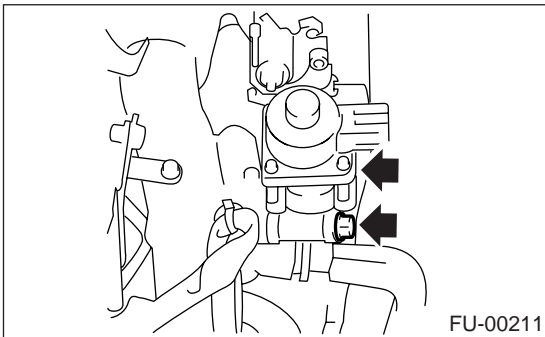

#### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**19 N·m (1.9 kgf-m, 14.0 ft-lb)**

