

## MAIN RELAY


FUEL INJECTION (FUEL SYSTEMS)

---

### 18.Main Relay

#### A: REMOVAL

1) Disconnect battery ground cable.

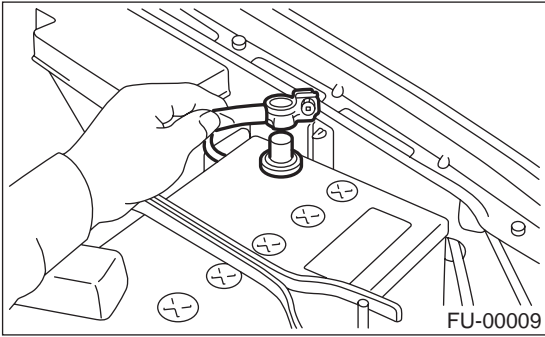


2) Remove lower inner trim of passenger side.

<Ref. to EI-42, REMOVAL, Lower Inner Trim.>

3) Disconnect connectors from main relay.

4) Remove bolt which holds main relay bracket on body.

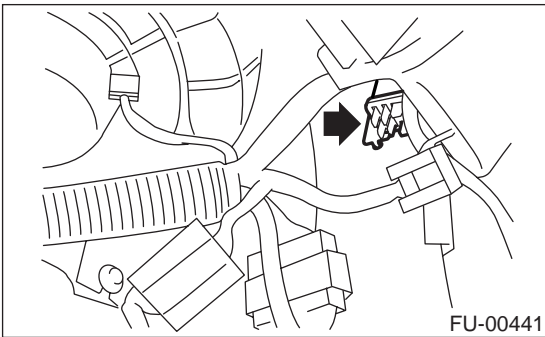

#### B: INSTALLATION

Install in the reverse order of removal.