


FUEL CUT VALVE

FUEL INJECTION (FUEL SYSTEMS)

27. Fuel Cut Valve

A: REMOVAL

- 1) Remove fuel tank. <Ref. to FU(H4SO)-53, REMOVAL, Fuel Tank.>
- 2) Move clip and disconnect evaporation hose from fuel cut valve.

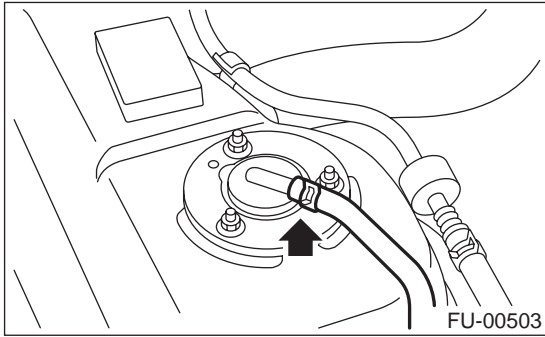

- 3) Remove bolts which install fuel cut valve.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

