


AIR CLEANER

INTAKE (INDUCTION)

2. Air Cleaner

A: REMOVAL

- 1) Remove bolt (A) which install air cleaner case to stays.
- 2) Remove the clip (B) above the air cleaner case.

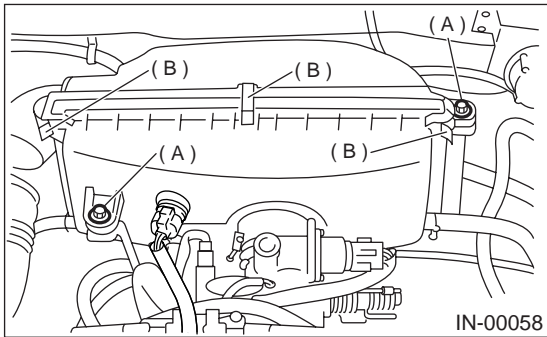

- 3) Remove air cleaner element.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Fasten with a clip after inserting the lower tab of the case.

C: INSPECTION

Replace if excessively damaged or dirty.