


AIR INTAKE DUCT

INTAKE (INDUCTION)


4. Air Intake Duct

A: REMOVAL


1) Remove bolts which install air intake duct on the front side of body.

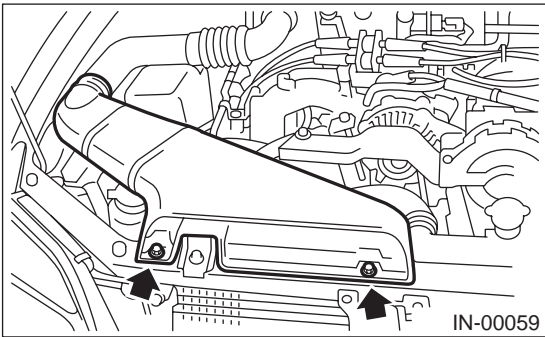

2) Remove bolt which installs air intake duct on body.

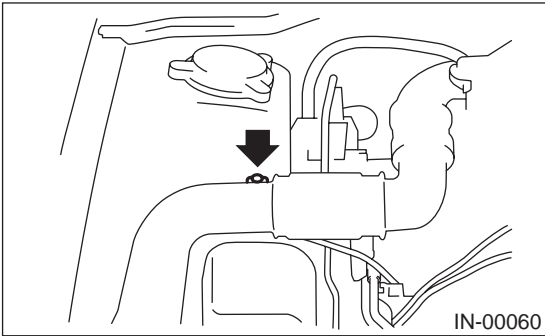

3) Remove air intake ducts as a unit.

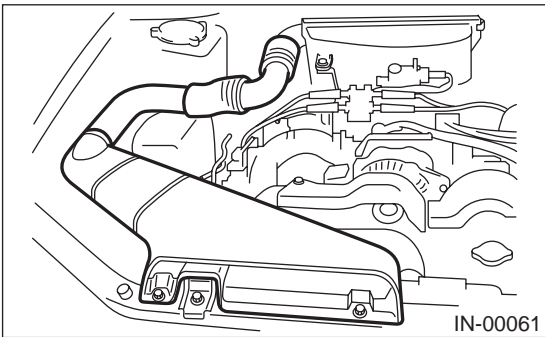

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Inspect for cracks and loose connections. Check that no foreign objects are mixed in the air intake duct.