


5. Resonator Chamber

A: REMOVAL

- 1) Remove air intake duct. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
- 2) Remove resonator chamber.

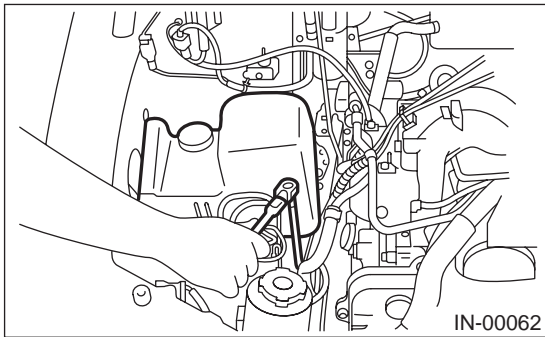


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

33 N·m (3.4 kgf·m, 24.6 ft·lb)

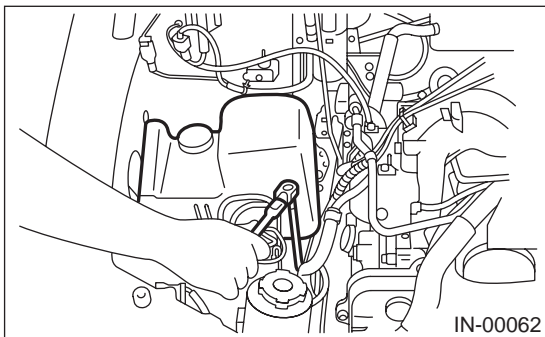

C: INSPECTION

Inspect for cracks and loose connections.

RESONATOR CHAMBER

INTAKE (INDUCTION)

MEMO:

IN(H4SO)-8