


OIL PRESSURE SWITCH

LUBRICATION


6. Oil Pressure Switch

A: REMOVAL

- 1) Remove generator from bracket. <Ref. to SC(H4SO)-15, REMOVAL, Generator.>
- 2) Disconnect terminal from oil pressure switch.

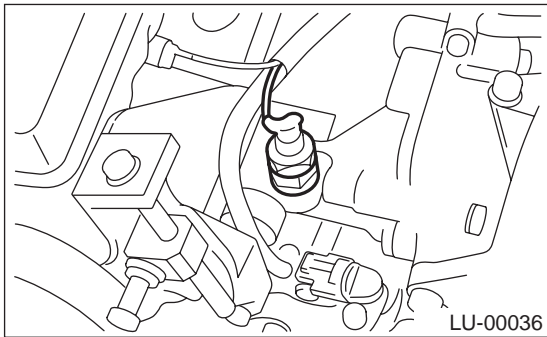

- 3) Remove oil pressure switch.

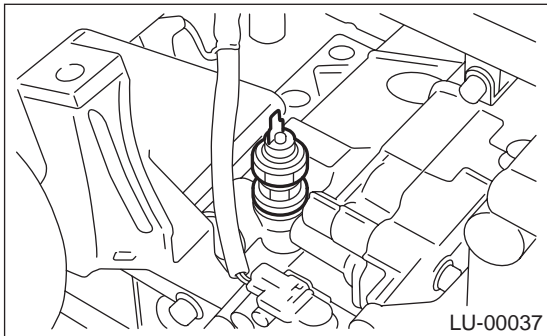


B: INSTALLATION

- 1) Apply fluid gasket to oil pressure switch threads.

Fluid gasket:

Part No. 004403042


THREE BOND 1324 or equivalent

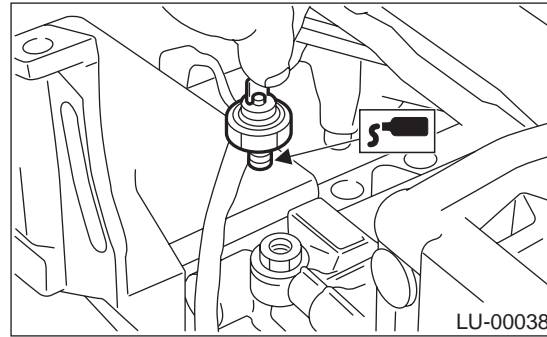


- 2) Install oil pressure switch onto engine block.

Tightening torque:

25 N·m (2.5 kgf·m, 18.1 ft·lb)

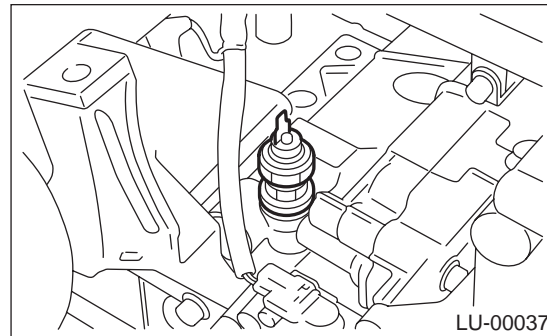

- 3) Connect terminal of oil pressure switch.

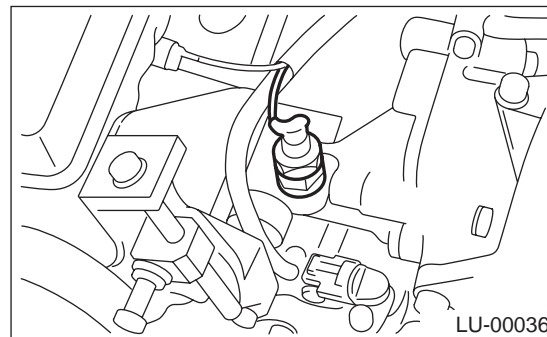

- 4) Install generator on bracket. <Ref. to SC(H4SO)-15, INSTALLATION, Generator.>

C: INSPECTION

Make sure oil does not leak or seep from where the oil pressure switch is installed.