

FUEL PRESSURE

MECHANICAL

7. Fuel Pressure

A: INSPECTION


WARNING:

Before removing fuel pressure gauge, release fuel pressure.


NOTE:

If out of specification, check or replace pressure regulator and pressure regulator vacuum hose.

- 1) Release fuel pressure. <Ref. to FU(H4SO)-50, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
- 2) Open fuel flap lid, and remove fuel filler cap.
- 3) Disconnect fuel delivery hoses from fuel filter, and connect fuel pressure gauge.

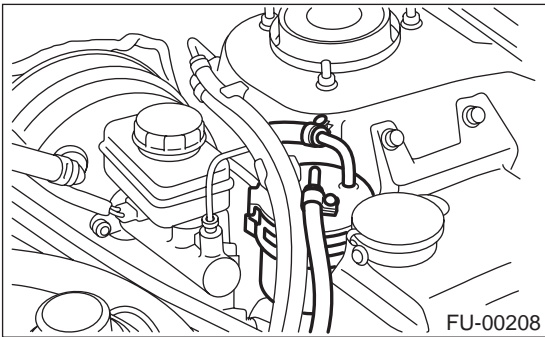


- 4) Connect connector of fuel pump relay.

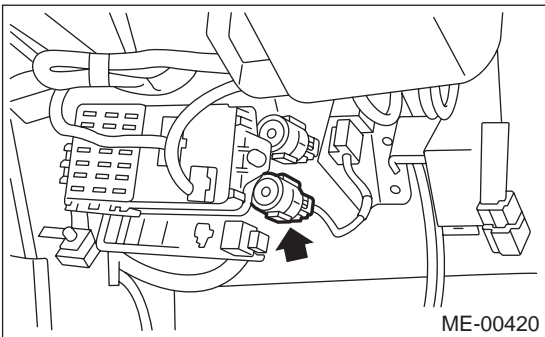

- 5) Start the engine.
- 6) Measure fuel pressure while disconnecting pressure regulator vacuum hose from intake manifold.

Fuel pressure:


Standard; 284 — 314 kPa (2.9 — 3.2 kg/cm², 41 — 46 psi)

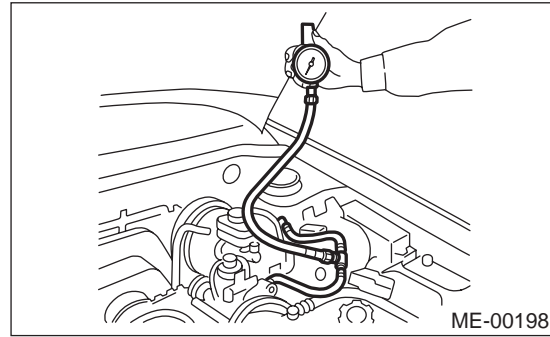

- 7) After connecting pressure regulator vacuum hose, measure fuel pressure.

Fuel pressure:

Standard; 206 — 235 kPa (2.1 — 2.4 kg/cm², 30 — 34 psi)

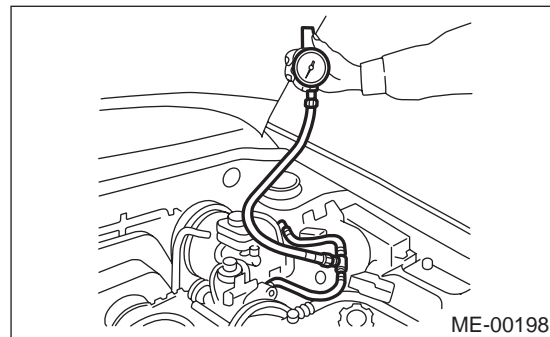

NOTE:

The fuel pressure gauge registers 10 to 20 kPa (0.1 to 0.2 kg/cm², 1 to 3 psi) higher than standard values during high-altitude operations.