


14. Belt Cover

A: REMOVAL

- 1) Remove V-belt. <Ref. to ME(H4SO)-42, REMOVAL, V-belt.>
- 2) Remove crankshaft pulley. <Ref. to ME(H4SO)-44, REMOVAL, Crankshaft Pulley.>
- 3) Remove belt cover (LH).
- 4) Remove front belt cover.

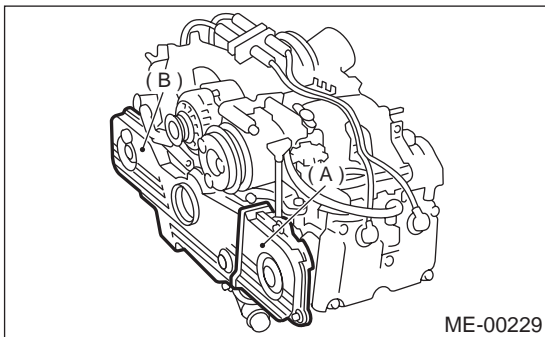

- (A) Belt cover (LH)
- (B) Front belt cover

B: INSTALLATION

- 1) Install front belt cover.


Tightening torque:

5 N·m (0.5 kgf·m, 3.6 ft·lb)

- 2) Install belt cover (LH).

Tightening torque:

5 N·m (0.5 kgf·m, 3.6 ft·lb)

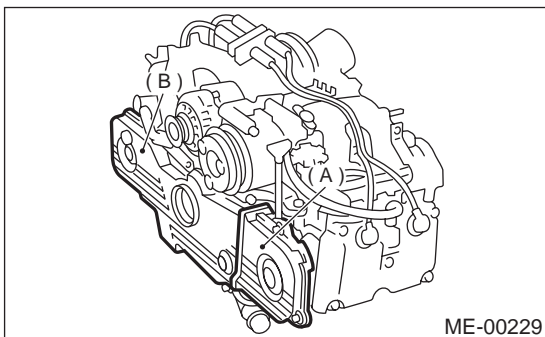

- (A) Belt cover (LH)
- (B) Front belt cover

- 3) Install crankshaft pulley. <Ref. to ME(H4SO)-44, INSTALLATION, Crankshaft Pulley.>
- 4) Install V-belt. <Ref. to ME(H4SO)-42, INSTALLATION, V-belt.>

C: INSPECTION

Make sure the cover is not damaged.