

## ACCELERATOR CONTROL CABLE

SPEED CONTROL SYSTEMS

---

### 3. Accelerator Control Cable


#### A: REMOVAL

- 1) Remove accelerator pedal. <Ref. to SP(H4SO)-3, REMOVAL, Accelerator Pedal.>
- 2) Separate accelerator cable and accelerator pedal.

#### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Apply grease at the accelerator cable end on engine room side.

Part No. 004404002 (Slicolube G-30M)

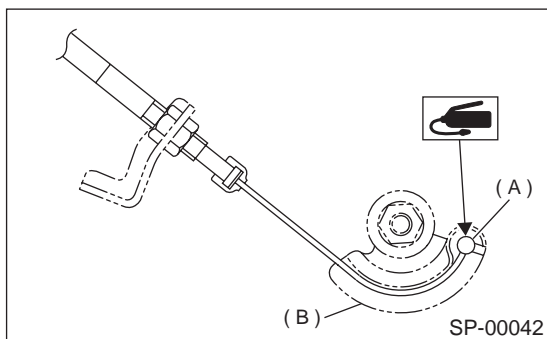

- (A) Cable end  
(B) Throttle cam

#### NOTE:

- If cable clamp is damaged, replace it with a new one.
  - Never fail to cover outer cable end with boot.
  - Be careful not to kink accelerator cable.
  - Do not apply grease except for special area.
- 3) Adjustment after pedal installation <Ref. to SP(H4SO)-4, INSTALLATION, Accelerator Pedal.>

#### C: INSPECTION

- 1) Make sure the inner cable is not twisted or frayed.
- 2) Make sure the outer cable is not cracked.