


### 11. Reservoir Tank

#### A: REMOVAL

- 1) Disconnect over flow hose from radiator filler neck position.
- 2) Remove bolts which install reservoir tank onto radiator main fan shroud.
- 3) Remove reservoir tank.

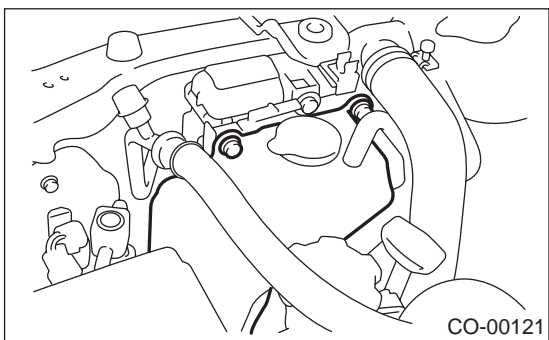


#### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**4.9N-m (0.50 kgf-m, 3.6 ft-lb)**

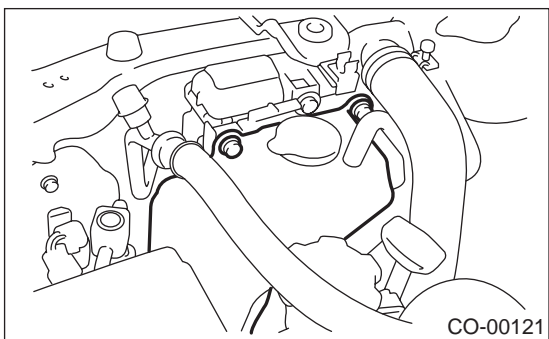

#### C: INSPECTION

Make sure the engine coolant level is between full and low.