


REAR CATALYTIC CONVERTER

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

3. Rear Catalytic Converter

A: REMOVAL


The front and rear catalytic converter are integrated into one unit. Therefore, the removal and installation procedures are the same as the those for the front catalytic converter. <Ref. to EC(H6DO)-3, REMOVAL, Front Catalytic Converter.>

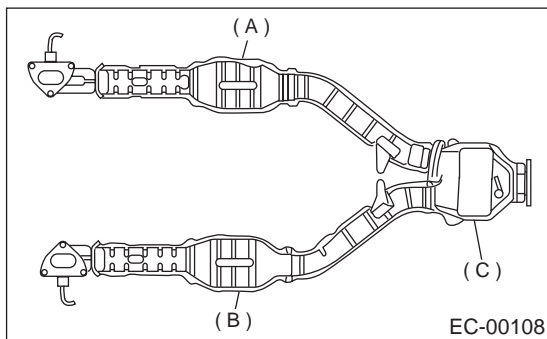

- (A) Front catalytic converter RH
- (B) Front catalytic converter LH
- (C) Rear catalytic converter

B: INSTALLATION

The front and rear catalytic converter are integrated into one unit. Therefore, the removal and installation procedures are the same as the ones described under front catalytic converter. <Ref. to EC(H6DO)-4, INSTALLATION, Front Catalytic Converter.>

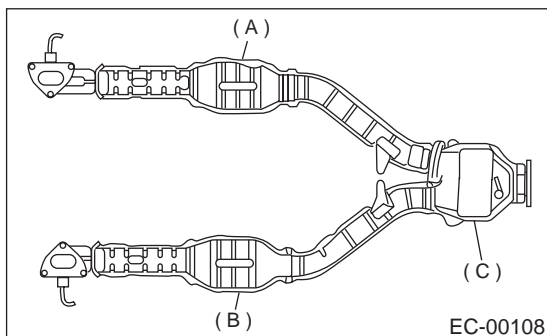

- (A) Front catalytic converter RH
- (B) Front catalytic converter LH
- (C) Rear catalytic converter

C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.