

## GENERAL DIAGNOSTIC TABLE

ENGINE (DIAGNOSTICS)

### 20. General Diagnostic Table

#### A: INSPECTION

##### 1. ENGINE

NOTE:

Malfunction of parts other than those listed is also possible. <Ref. to ME(H6DO)-75, Engine Trouble in General.>

Symptom	Problem parts
1. Engine stalls during idling.	1) Idle air control solenoid valve 2) Intake manifold pressure sensor 3) Intake air temperature sensor 4) Intake air temperature and pressure sensor 5) Ignition parts (*1) 6) Engine coolant temperature sensor (*2) 7) Crankshaft position sensor (*3) 8) Camshaft position sensor (*3) 9) Fuel injection parts (*4) 10) EGR valve
2. Rough idling	1) Idle air control solenoid valve 2) Intake manifold pressure sensor 3) Intake air temperature sensor 4) Intake air temperature and pressure sensor 5) Engine coolant temperature sensor (*2) 6) Ignition parts (*1) 7) Air intake system (*5) 8) Fuel injection parts (*4) 9) Throttle position sensor 10) Crankshaft position sensor (*3) 11) Camshaft position sensor (*3) 12) Oxygen sensor 13) Fuel pump and fuel pump relay 14) EGR valve
3. Engine does not return to idle.	1) Idle air control solenoid valve 2) Engine coolant temperature sensor 3) Accelerator cable (*6) 4) Throttle position sensor 5) Intake manifold pressure sensor 6) Intake air temperature sensor 7) Intake air temperature and pressure sensor 8) EGR valve
4. Poor acceleration	1) Intake manifold pressure sensor 2) Intake air temperature sensor 3) Intake air temperature and pressure sensor 4) Throttle position sensor 5) Fuel injection parts (*4) 6) Fuel pump and fuel pump relay 7) Engine coolant temperature sensor (*2) 8) Crankshaft position sensor (*3) 9) Camshaft position sensor (*3) 10) A/C switch and A/C cut relay 11) Engine torque control signal circuit 12) Ignition parts (*1) 13) EGR valve

## GENERAL DIAGNOSTIC TABLE

ENGINE (DIAGNOSTICS)

Symptom	Problem parts
5. Engine stalls or engine sags or hesitates at acceleration.	1) Intake manifold pressure sensor 2) Intake air temperature sensor 3) Intake air temperature and pressure sensor 4) Engine coolant temperature sensor (*2) 5) Crankshaft position sensor (*3) 6) Camshaft position sensor (*3) 7) Purge control solenoid valve 8) Fuel injection parts (*4) 9) Throttle position sensor 10) Fuel pump and fuel pump relay 11) EGR valve
6. Surge	1) Intake manifold pressure sensor 2) Intake air temperature sensor 3) Intake air temperature and pressure sensor 4) Engine coolant temperature sensor (*2) 5) Crankshaft position sensor (*3) 6) Camshaft position sensor (*3) 7) Fuel injection parts (*4) 8) Throttle position sensor 9) Fuel pump and fuel pump relay 10) EGR valve
7. Spark knock	1) Intake manifold pressure sensor 2) Intake air temperature sensor 3) Intake air temperature and pressure sensor 4) Engine coolant temperature sensor 5) Knock sensor 6) Fuel injection parts (*4) 7) Fuel pump and fuel pump relay
8. After burning in exhaust system	1) Intake manifold pressure sensor 2) Intake air temperature sensor 3) Intake air temperature and pressure sensor 4) Engine coolant temperature sensor (*2) 5) Fuel injection parts (*4) 6) Fuel pump and fuel pump relay

\*1: Check ignition coil & ignitor assembly and spark plug.

\*2: Indicate the symptom occurring only in cold temperatures.

\*3: Ensure the secure installation.

\*4: Check fuel injector, fuel pressure regulator and fuel filter.

\*5: Inspect air leak in air intake system.

\*6: Adjust accelerator cable.

## 2. AUTOMATIC TRANSMISSION

NOTE:

Check general diagnostics table with non-conformity symptom for automatic transmission. <Ref. to AT-2, Basic Diagnostic Procedure.>

## GENERAL DIAGNOSTIC TABLE

ENGINE (DIAGNOSTICS)

---

**MEMO:**