


THROTTLE BODY

FUEL INJECTION (FUEL SYSTEMS)

2. Throttle Body

A: REMOVAL

1) Disconnect battery ground cable.

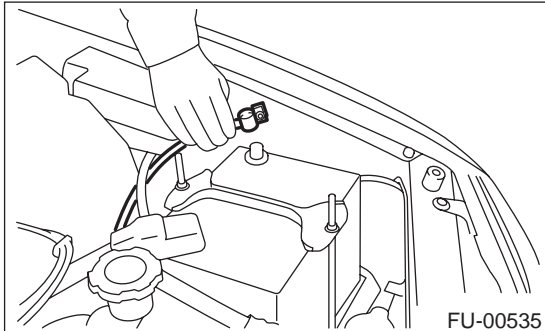


2) Remove air intake chamber.

<Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>


3) Disconnect accelerator cable (A).

4) Disconnect cruise control cable (B). (With cruise control model)

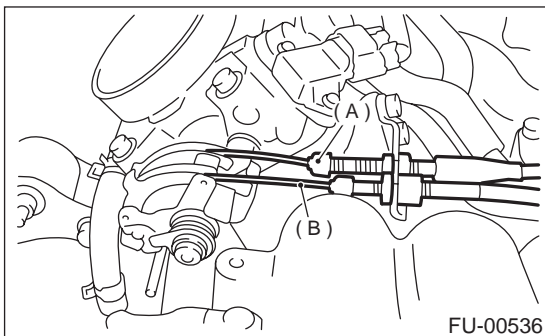


5) Disconnect connectors from intake manifold pressure sensor (A) and idle air control solenoid valve (B).

6) Disconnect air by-pass hose (C) from idle air control solenoid valve.

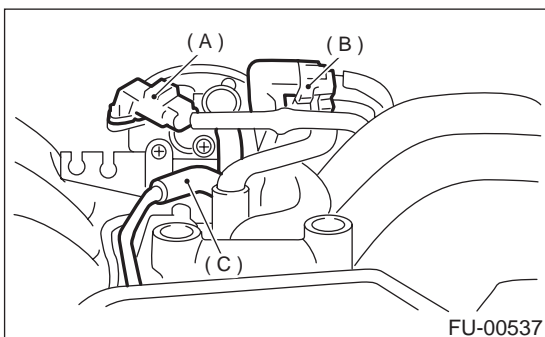


7) Disconnect throttle position sensor connector.

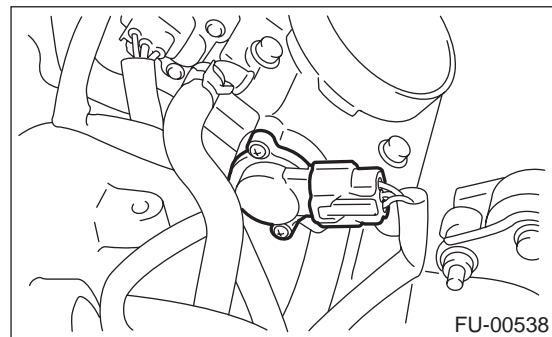

8) Disconnect engine coolant hoses from throttle body.

9) Remove bolts which secure throttle body to intake manifold.

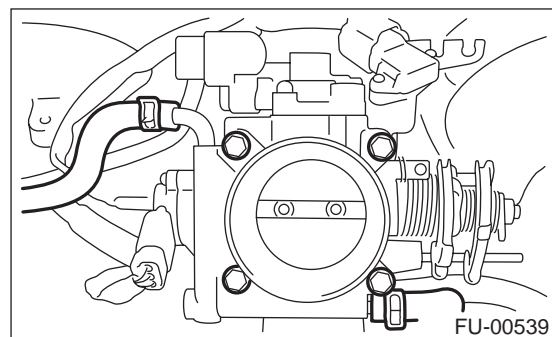

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Always use a new gasket.

Tightening torque:

Throttle body;

22 N·m (2.2 kgf-m, 15.9 ft-lb)