


THROTTLE POSITION SENSOR

FUEL INJECTION (FUEL SYSTEMS)

8. Throttle Position Sensor


A: REMOVAL

- 1) Disconnect battery ground cable.

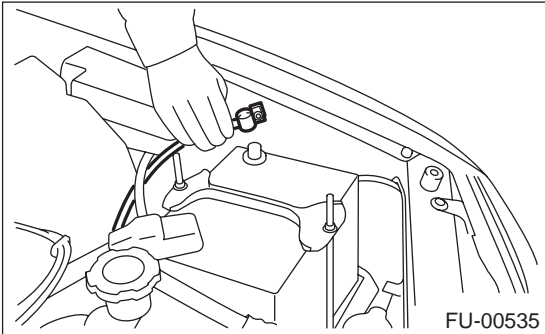

Remove air intake chamber. <Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>

- 2) Disconnect connector from throttle position sensor.
- 3) Remove throttle position sensor holding screws, and remove throttle position sensor itself.

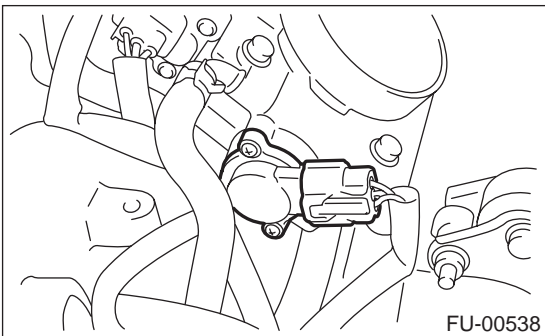

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

1.6 N·m (0.16 kgf-m, 1.2 ft-lb)

