

## IDLE AIR CONTROL SOLENOID VALVE


FUEL INJECTION (FUEL SYSTEMS)

---

### 11. Idle Air Control Solenoid Valve

#### A: REMOVAL


1) Disconnect battery ground cable.

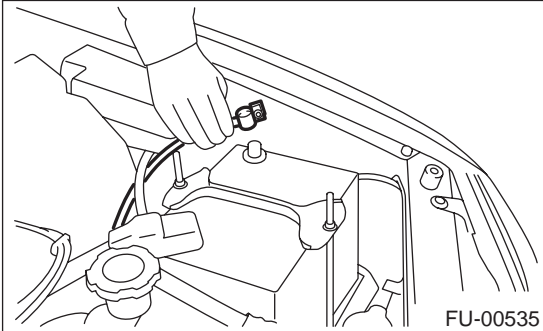

2) Disconnect connector (A) from idle air control solenoid valve.

3) Disconnect air by-pass hose (B) from idle air control solenoid valve.

4) Remove idle air control solenoid valve from throttle body.

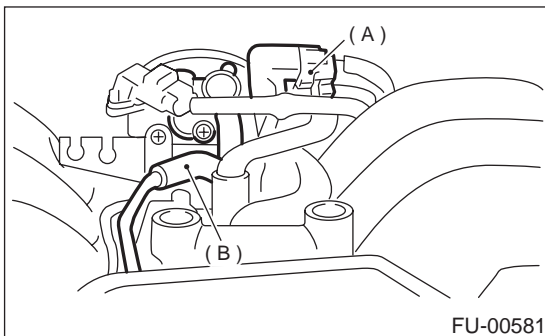

#### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Replace gasket with a new one.

**Tightening torque:**

**2.8 N·m (0.29 kgf-m, 2.1 ft-lb)**