


REAR OXYGEN SENSOR

FUEL INJECTION (FUEL SYSTEMS)


16. Rear Oxygen Sensor

A: REMOVAL

- 1) Disconnect battery ground cable.

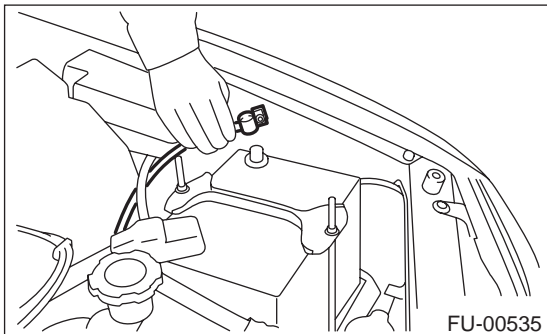

- 2) Disconnect connector from rear oxygen sensor.

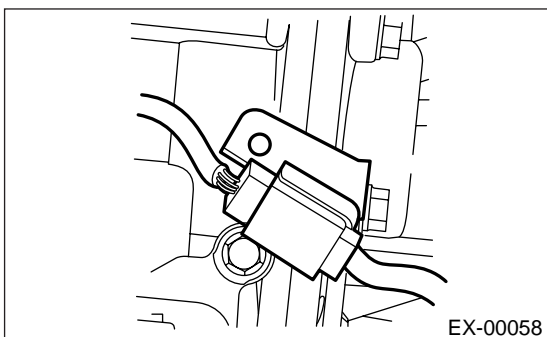


- 3) Lift-up the vehicle.
- 4) Apply SUBARU CRC or its equivalent to threaded portion of rear oxygen sensor, and leave it for one minute or more.

SUBARU CRC (Part No. 004301003)

- 5) Remove rear oxygen sensor.

CAUTION:

When removing, do not force rear oxygen sensor in an unnatural way especially when exhaust pipe is cold, otherwise it will damage exhaust pipe.

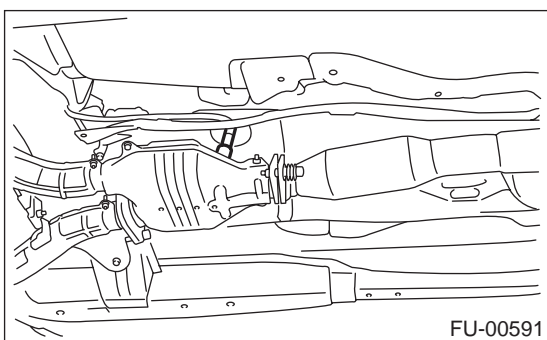

B: INSTALLATION

- 1) Before installing rear oxygen sensor, apply anti-seize compound only to threaded portion of rear oxygen sensor to make the next removal easier.

CAUTION:

Never apply anti-seize compound to protector of rear oxygen sensor.


Anti-seize compound:

SS-30 by JET LUBE


- 2) Install rear oxygen sensor.

Tightening torque:

21 N·m (2.1 kgf·m, 15.2 ft·lb)

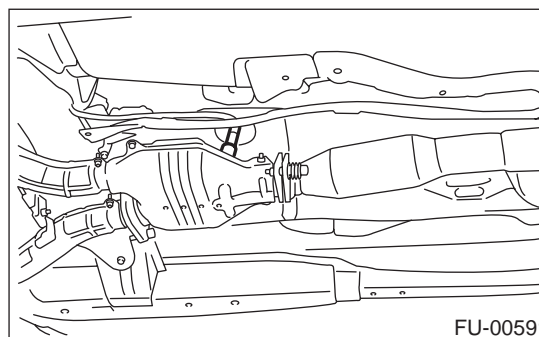

- 3) Connect connector to rear oxygen sensor.

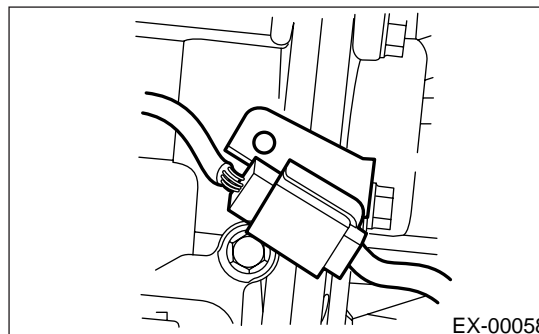

- 4) Lower the vehicle.
- 5) Connect battery ground cable.

