


MAIN RELAY

FUEL INJECTION (FUEL SYSTEMS)

18.Main Relay

A: REMOVAL


1) Disconnect battery ground cable.

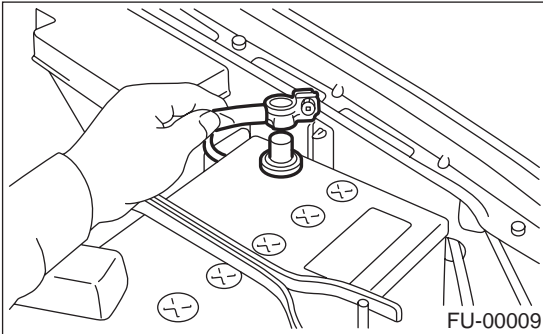

2) Remove lower inner trim of passenger side.
<Ref. to EI-42, REMOVAL, Lower Inner Trim.>

3) Disconnect connectors from main relay.

4) Remove bolt which holds main relay bracket on body.

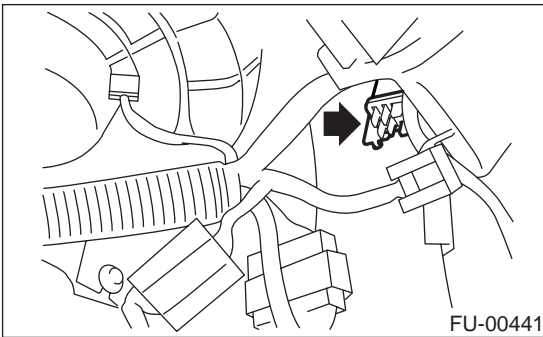

B: INSTALLATION

Install in the reverse order of removal.