


FUEL DAMPER VALVE

FUEL INJECTION (FUEL SYSTEMS)

29. Fuel Damper Valve

A: REMOVAL

- 1) Release fuel pressure. <Ref. to FU(H6DO)-50, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
- 2) Remove fuel damper valve from return line.

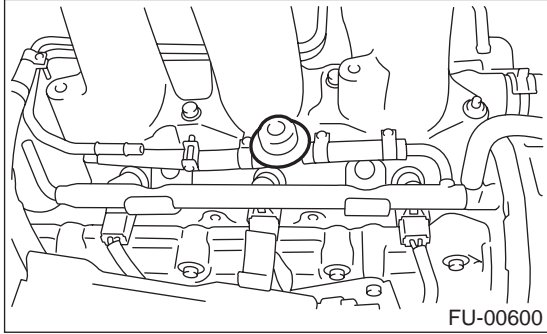

B: INSTALLATION

Install in the reverse order of removal.