

### 3. Ignition Coil and Ignitor Assembly

#### A: REMOVAL

Direct ignition type is adopted.  
For the order of removal, refer to the removal of spark plugs.

#### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**16 N·m (1.6 kgf-m, 12 ft-lb)**

#### C: INSPECTION

Because ignition coil is a direct ignition type, the resistance cannot be measured in a single unit. For inspection procedure of ignition system, refer to the following. <Ref. to EN(H6DO)-84, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>

## IGNITION COIL AND IGNITOR ASSEMBLY

IGNITION

---

**MEMO:**

**IG(H6DO)-8**