


AIR CLEANER

INTAKE (INDUCTION)


2. Air Cleaner

A: REMOVAL

- 1) Loosen clamp (A), and separate air cleaner upper cover from air intake boot.
- 2) Remove the clip (B) above the air cleaner upper cover.

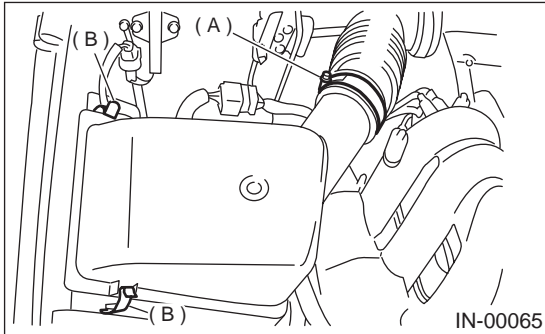

- 3) Remove air cleaner element.
- 4) Remove air cleaner lower case.

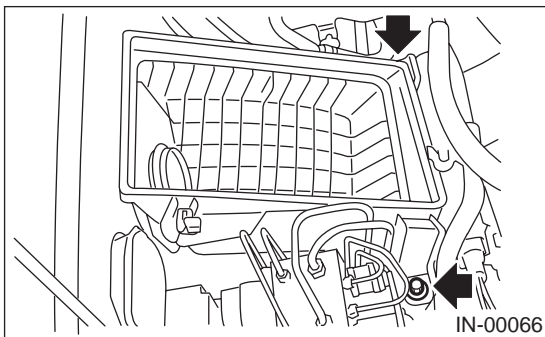


B: INSTALLATION

- 1) Install the air cleaner lower case.

Tightening torque:


32.3 N·m (3.3 kgf-m, 23.9 ft-lb)

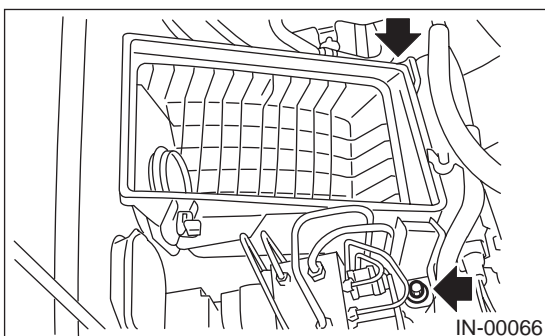


- 2) Set the air cleaner element.
- 3) Install the air cleaner upper cover.

NOTE:

Before installing air cleaner upper cover, align holes with protruding portions of air cleaner lower case, then secure upper cover to lower case.

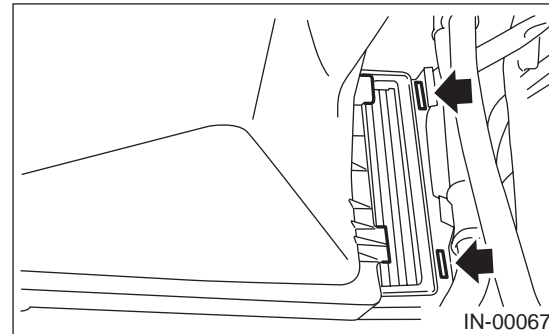

- 4) Install the clip (B) above the air cleaner upper cover.
- 5) Tighten clamp (A), and connect air intake boot and air cleaner upper cover.

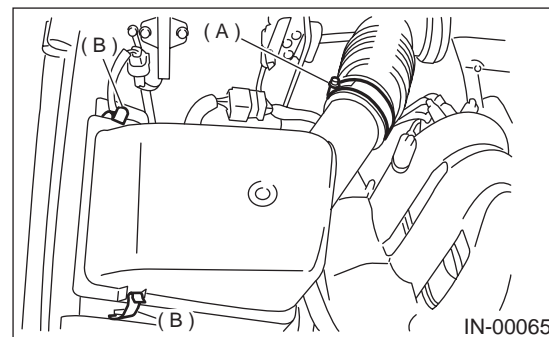

C: INSPECTION

Replace if excessively damaged or dirty.