


RESONATOR CHAMBER

INTAKE (INDUCTION)


5. Resonator Chamber

A: REMOVAL

- 1) Set vehicle on a lift.
- 2) Remove air intake duct. <Ref. to IN(H6DO)-7, REMOVAL, Air Intake Duct.>
- 3) Remove air cleaner lower case. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner.>
- 4) Remove the resonator chamber mounting bolt on the right of engine compartment.

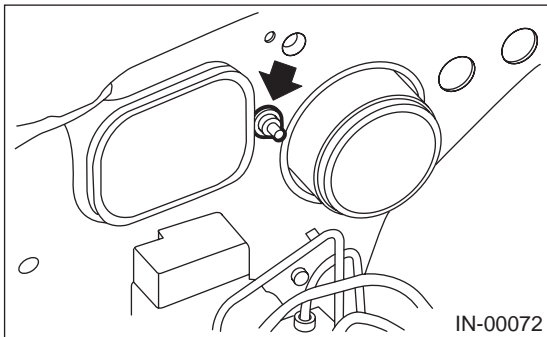

- 5) Remove the front right tire, and lift the vehicle.
- 6) Remove front mudguard RH.
- 7) Remove the resonator chamber (A) from the inside front fender.

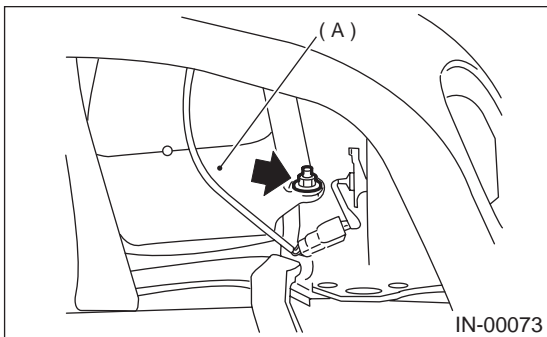

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Inspect for cracks and loose connections. Check that no foreign objects are mixed in the resonator chamber.