


## ENGINE OIL FILTER

LUBRICATION


### 8. Engine Oil Filter

#### A: REMOVAL


- 1) Drain engine oil by loosening engine oil drain plug.

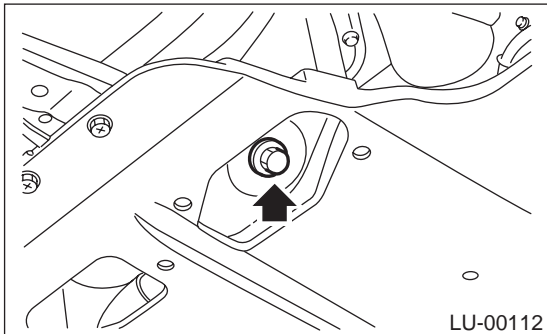

- 2) Remove access lid.

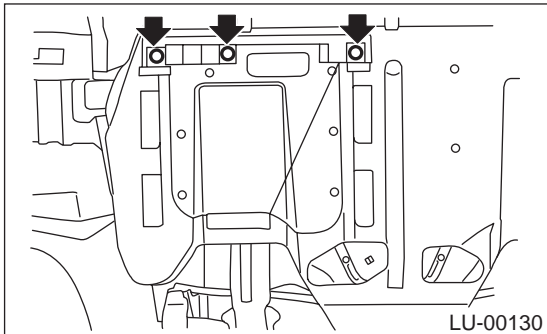

- 3) Remove oil filter with ST.  
ST 498547000 OIL FILTER WRENCH

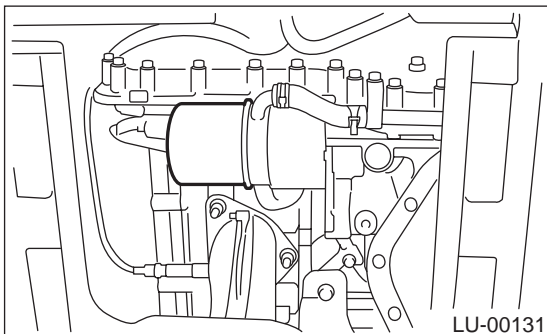

#### B: INSTALLATION

- 1) Get a new oil filter and thinly apply engine oil to the rubber seal.
- 2) Install oil filter by turning it by hand, being careful not to damage rubber seal.
- 3) Tighten more (approximately 3/4 turn) after the rubber seal contacts the oil cooler. Do not tighten excessively, or oil may leak.

#### C: INSPECTION

- 1) After installing oil filter, run engine and make sure that no oil is leaking around rubber seal.

#### NOTE:

The filter element and filter case are unified; therefore, interior cleaning is not necessary.

- 2) Check the engine oil level. <Ref. to LU(H6DO)-9, INSPECTION, Engine Oil.>