

ENGINE MOUNTING

MECHANICAL

8. Engine Mounting

A: REMOVAL

- 1) Remove engine assembly. <Ref. to ME(H6DO)-29, REMOVAL, Engine Assembly.>
- 2) Remove engine mounting from engine assembly.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Engine mounting;

34 N·m (3.5 kgf-m, 25.3 ft-lb)

C: INSPECTION

Make sure there are no cracks or other damage.