19.Engine Trouble in General

A: INSPECTION

NOTE:

"RANK" shown in the chart refer to the possibility of reason for the trouble in order ("Very often" to "Rarely")

- A Very often
 B Sometimes
 C Rarely

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
Engine will not start.			•
1) Starter does not turn.	Starter	Defective battery-to-starter harness	В
		Defective starter switch	С
		Defective inhibitor switch or neutral switch	С
		Defective starter	В
	Battery	Poor terminal connection	Α
		Run-down battery	Α
		Defective charging system	В
	Friction	Seizure of crankshaft and connecting rod bearing	С
		Seized camshaft	С
		Seized or stuck piston and cylinder	С
2) Initial combustion does	Starter	Defective starter	С
not occur.	• Engine control system <ref.< td=""><td>to EN(H6DO)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.<>	to EN(H6DO)-2, Basic Diagnostic Procedure.>	Α
	• Fuel line	Defective fuel pump and relay	Α
		Lack of or insufficient fuel	В
	Chain	Defective	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
	·	Loosened spark plugs or defective gasket	С
		Loosened cylinder head bolts or defective gasket	С
		Improper valve seating	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В
3) Initial combustion occur.	• Engine control system <ref. basic="" diagnostic="" en(h6do)-2,="" procedure.="" to=""></ref.>		Α
-,	Starter Battery Friction Starter Engine control system <ref. chain="" compression<="" fuel="" line="" t="" td=""><td>Defective intake manifold gasket</td><td>В</td></ref.>	Defective intake manifold gasket	В
		Defective throttle body gasket	В
	• Fuel line	Defective fuel pump and relay	С
		Clogged fuel line	С
		Lack of or insufficient fuel	В
	Chain	Defective	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
		Loosened spark plugs or defective gasket	С
		Loosened cylinder head bolts or defective gasket	С
		Improper valve seating	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В

ENGINE TROUBLE IN GENERAL

MECHANICAL

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
4) Engine stalls after initial	• Engine control system <ref. td="" to<=""><td>EN(H6DO)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H6DO)-2, Basic Diagnostic Procedure.>	Α
combustion.	Intake system	Loosened or cracked intake duct	В
		Loosened or cracked PCV hose	С
		Loosened or cracked vacuum hose	С
-		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Dirty air cleaner element	С
	• Fuel line	Clogged fuel line	С
		Lack of or insufficient fuel	В
	Chain	Defective	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
		Loosened spark plugs or defective gasket	С
		Loosened cylinder head bolts or defective gasket	С
		Improper valve seating	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В
2. Rough idle and engine	• Engine control system <ref. td="" to<=""><td>1</td><td>Α</td></ref.>	1	Α
stall	• Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		Loosened or cracked vacuum hose	Α
			В
			В
		Defective PCV valve	С
		Loosened oil filter cap	В
			С
	• Fuel line	•	С
			С
		Loosened or cracked PCV hose	В
	Puel line Defective fuel pump and relay Clogged fuel line Lack of or insufficient fuel Ohain Defective timing	С	
		Ť	В
	•		В
			В
		, , , , , , , , , , , , , , , , , , ,	В
			С
			В
		1 0	В
			Α
			В
	Lubrication system		В
		·	С
	Cooling system		C
	• Others	<u>-</u>	A
		-	В
			С

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
3. Low output, hesitation and		EN(H6DO)-2, Basic Diagnostic Procedure.>	Α
poor acceleration	Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		Loosened or cracked vacuum hose	В
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	В
		Loosened oil filler cap	В
		Dirty air cleaner element	A
	• Fuel line	Defective fuel pump and relay	В
	1 doi mio	Clogged fuel line	В
		Lack of or insufficient fuel	С
	Chain	Defective timing	В
	Compression	Incorrect valve clearance	В
	Compression	Loosened spark plugs or defective gasket	В
		Loosened cylinder head bolts or defective gasket	В
		Improper valve seating	В
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	Α
		Improper engine oil (low viscosity)	В
	Lubrication system	Incorrect oil pressure	В
	Cooling system	Overheating	С
		Over cooling	С
	Others	Malfunction of evaporative emission control system	Α
4. Surging		EN(H6DO)-2, Basic Diagnostic Procedure.>	Α
	Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		 Loosened or cracked vacuum hose 	Α
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	В
		Loosened oil filler cap	В
		Dirty air cleaner element	В
	• Fuel line	Defective fuel pump and relay	В
		Clogged fuel line	В
		Lack of or insufficient fuel	С
	Chain	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plugs or defective gasket	С
		Loosened cylinder head bolts or defective gasket	С
		Improper valve seating	C
		Defective valve stem	C
		Worn or broken valve spring	C
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	A
		Improper engine oil (low viscosity)	В
	• Cooling system		В
	Cooling system Others	Overheating Meltination of evenerative emission central eveters.	
	Others	Malfunction of evaporative emission control system	С

ENGINE TROUBLE IN GENERAL

MECHANICAL

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
5. Engine does not return to	• Engine control system <ref. td="" to<=""><td>EN(H6DO)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H6DO)-2, Basic Diagnostic Procedure.>	Α
idle.	Intake system	Loosened or cracked vacuum hose	Α
	Others	Stuck or damaged throttle valve	Α
		Accelerator cable out of adjustment	В
6. Dieseling (Run-on)	• Engine control system <ref. td="" to<=""><td>EN(H6DO)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H6DO)-2, Basic Diagnostic Procedure.>	Α
- ' '	Cooling system	Overheating	В
	• Others	Malfunction of evaporative emission control system	В
7. After burning in exhaust	• Engine control system <ref. td="" to<=""><td>EN(H6DO)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H6DO)-2, Basic Diagnostic Procedure.>	Α
system	Intake system	Loosened or cracked intake duct	С
		Loosened or cracked PCV hose	С
		Loosened or cracked vacuum hose	В
		Defective PCV valve	В
		Loosened oil filler cap	С
	Chain	Defective timing	В
	Compression	Incorrect valve clearance	В
	·	Loosened spark plugs or defective gasket	С
		Loosened cylinder head bolts or defective gasket	С
		Improper valve seating	В
		Defective valve stem	С
		Worn or broken valve spring	С
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	Α
	Lubrication system	Incorrect oil pressure	С
	Cooling system	Over cooling	С
	• Others	Malfunction of evaporative emission control system	С
8. Knocking	• Engine control system <ref. td="" to<=""><td>EN(H6DO)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H6DO)-2, Basic Diagnostic Procedure.>	Α
51 1 m 551 m 1g	Intake system	Loosened oil filter cap	В
	Chain	Defective timing	В
	Compression	Incorrect valve clearance	С
		Incorrect valve timing	В
	Cooling system	Overheating	Α
9. Excessive engine oil con-	Intake system	Loosened or cracked PCV hose	Α
sumption		Defective PCV valve	В
		Loosened oil filler cap	С
	Compression	Defective valve stem	Α
		Worn or stuck piston rings, cylinder and piston	A
	Lubrication system	Loosened oil pump attaching bolts and defective gasket	В
		Defective oil filter seal	В
		Defective on filter sear Defective crankshaft oil seal	В
		Defective crankshart on sear Defective rocker cover gasket	В
		Loosened oil drain plug or defective gasket	В
			-
		Loosened oil pan fitting bolts or defective oil pan	В

ENGINE TROUBLE IN GENERAL

MECHANICAL

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
10. Excessive fuel consump-	• Engine control system <ref. basic="" diagnostic="" en(h6do)-2,="" procedure.="" to=""></ref.>		Α
tion	Intake system	Dirty air cleaner element	Α
	Chain	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plugs or defective gasket	С
		Loosened cylinder head bolts or defective gasket	С
		Improper valve seating	В
		Defective valve stem	С
		Worn or broken valve spring	С
		Worn or stuck piston rings, cylinder and piston	В
		Incorrect valve timing	В
	Lubrication system	Incorrect oil pressure	С
	Cooling system	Over cooling	С
	Others	Accelerator cable out of adjustment	В