


SCHEMATIC DIAGRAMS

Emission Control (Aux. Emission Control Devices)

2. Schematic Diagrams

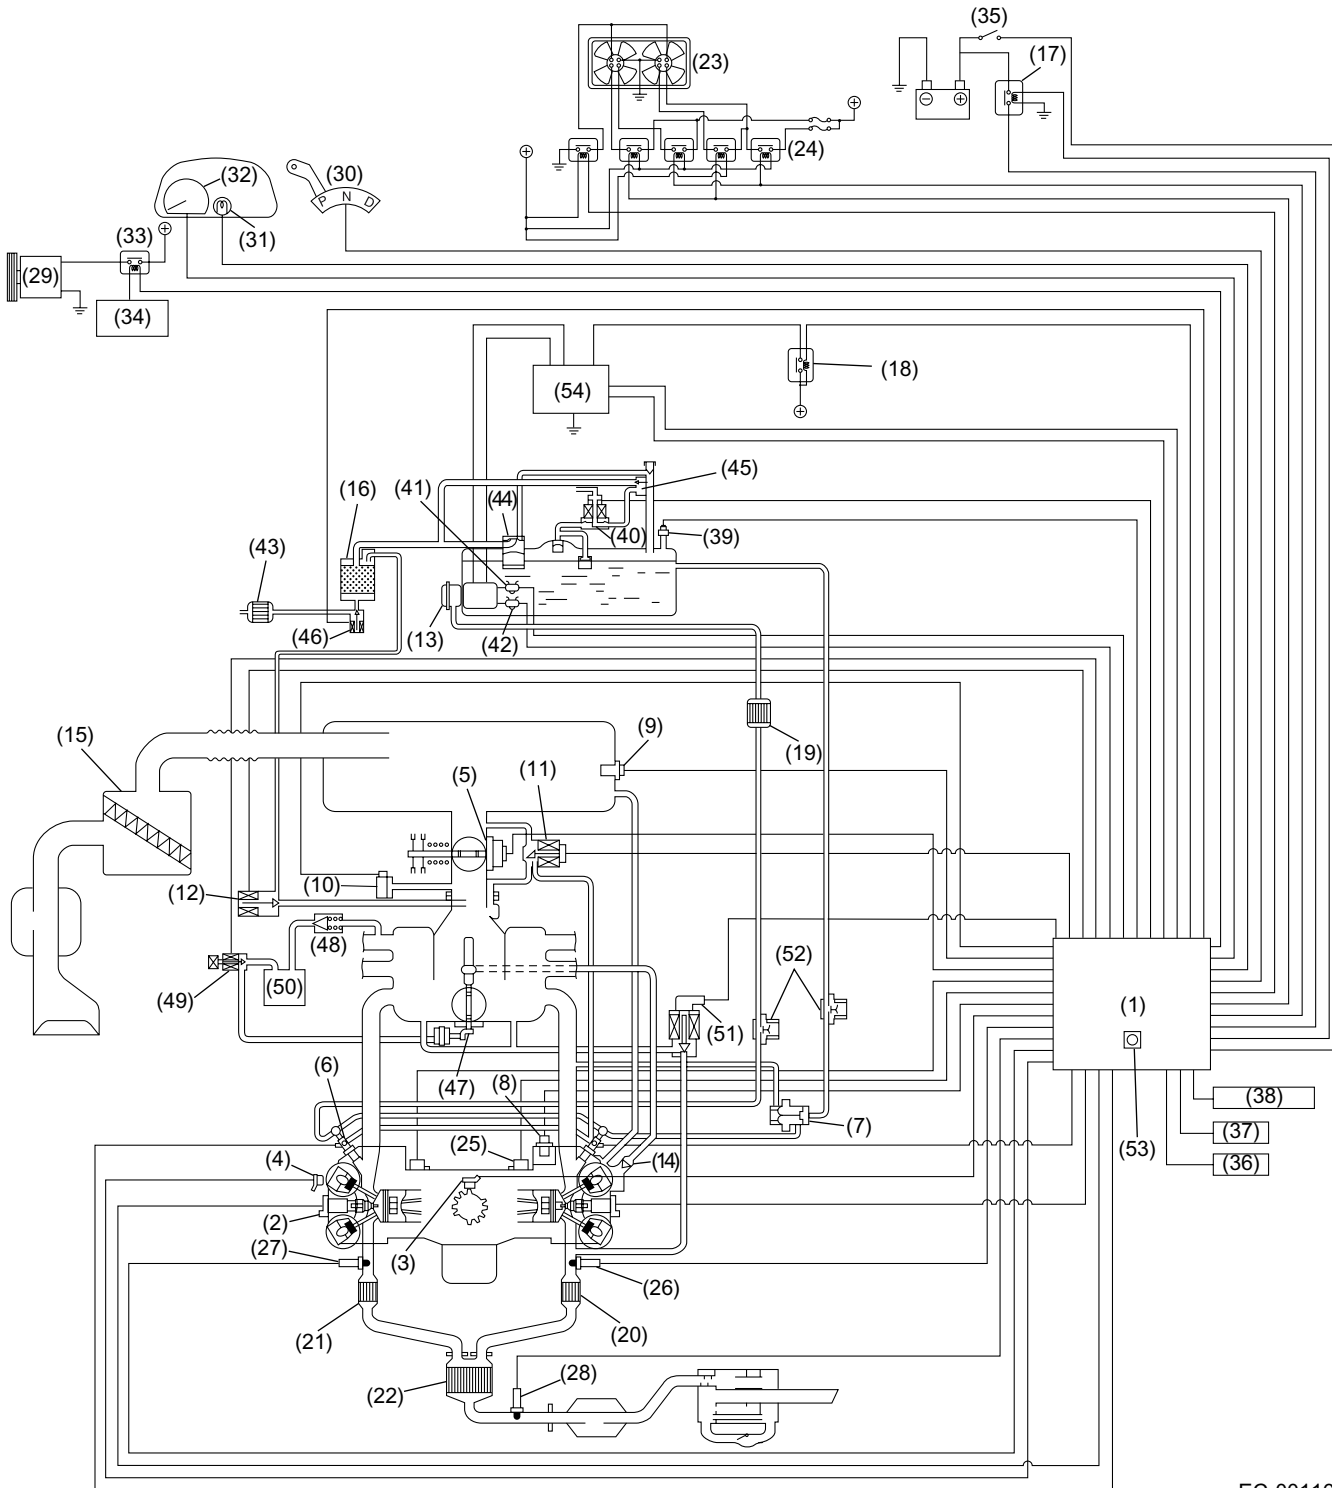

EC-00116

SCHEMATIC DIAGRAMS

Emission Control (Aux. Emission Control Devices)

- | | | |
|--|--|--|
| (1) Engine control module (ECM) | (19) Fuel filter | (37) Data link connector |
| (2) Ignition coil and ignitor assembly | (20) Front catalytic converter LH | (38) Transmission control module (TCM) |
| (3) Crankshaft position sensor | (21) Front catalytic converter RH | (39) Fuel tank pressure sensor |
| (4) Camshaft position sensor | (22) Rear catalytic converter | (40) Pressure control solenoid valve |
| (5) Throttle position sensor | (23) Radiator fan | (41) Fuel temperature sensor |
| (6) Fuel Injector | (24) Radiator fan relay | (42) Fuel level sensor |
| (7) Pressure regulator | (25) Knock sensor | (43) Drain filter |
| (8) Engine coolant temperature sensor | (26) Front oxygen (A/F) sensor LH | (44) Vent valve |
| (9) Intake air temperature sensor | (27) Front oxygen (A/F) sensor RH | (45) Shut-off valve |
| (10) Intake manifold pressure sensor | (28) Rear oxygen sensor | (46) Drain valve |
| (11) Idle air control solenoid valve | (29) A/C compressor | (47) Induction valve |
| (12) Purge control solenoid valve | (30) Inhibitor switch | (48) Check valve |
| (13) Fuel pump | (31) CHECK ENGINE malfunction indicator lamp (MIL) | (49) Induction valve control solenoid |
| (14) PCV valve | (32) Tachometer | (50) Vacuum tank |
| (15) Air cleaner element | (33) A/C control relay | (51) EGR valve |
| (16) Canister | (34) A/C control module | (52) Fuel damper |
| (17) Main relay | (35) Ignition switch | (53) Atmospheric pressure sensor |
| (18) Fuel pump relay | (36) Vehicle speed sensor | (54) Fuel pump controller |