

1. General

• The exhaust system consists of a front exhaust pipe assembly, a rear exhaust pipe with two resonance chambers, and a variable-flow muffler. The front exhaust pipe assembly consists of right and left exhaust pipes each incorporating a front catalytic converter, and a rear catalytic converter that is located at the joint of the two pipes.

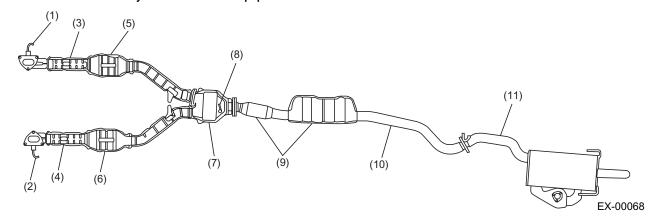

- (1) Front oxygen (A/F) sensor RH
- (2) Front oxygen (A/F) sensor LH
- (3) Front exhaust pipe RH
- (4) Front exhaust pipe LH
- (5) Front catalytic converter RH
- (6) Front catalytic converter LH

- (7) Rear catalytic converter
- (8) Rear oxygen sensor
- (9) Resonance chamber
- (10) Rear exhaust pipe
- (11) Muffler
- The variable-flow muffler has a valve which opens when the exhaust pressure increases. This helps reducing exhaust noise and increasing engine output simultaneously.

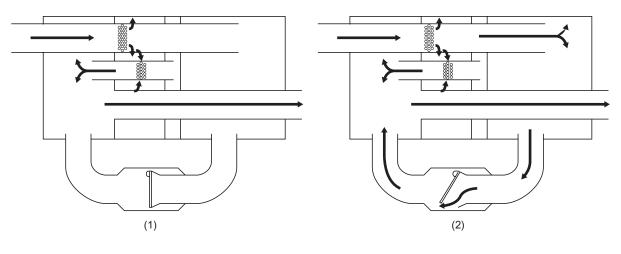

EX-00069

- (1) Low engine speed
- (2) High engine speed