

POWER WINDOW

Glass/Windows/Mirrors

1. Power Window

A: CONSTRUCTION

- The power window system consists of regulator motors and switches for individual doors, relays and a circuit breaker unit.
- Each door window opens/closes by pushing down/pulling up the switch.
- Only the driver's door window switch has a 2-stage mechanism:
 - When the switch is pushed lightly and held in the pushed position, the window continues to lower until the switch is released.
 - When the switch is pushed down fully, the window lowers to the end position automatically.


NOTE:

For the sake of safety, the power window system is designed to operate only when the ignition switch is in the ON position.

POWER WINDOW

Glass/Windows/Mirrors

B: CIRCUIT DIAGRAM

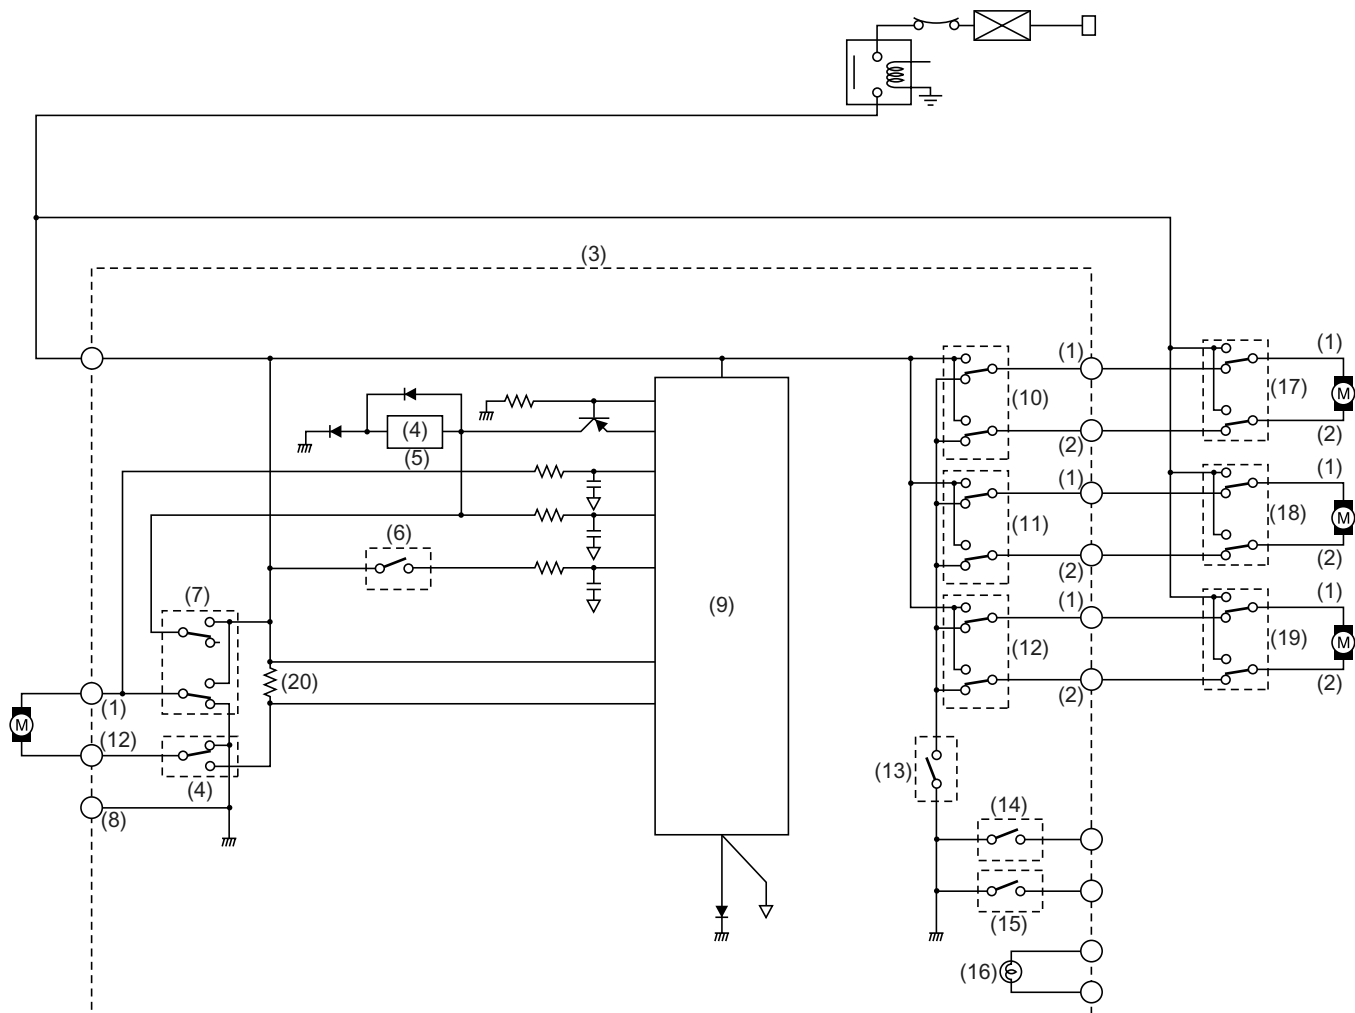

GW-00141

- | | |
|-------------------------------|------------------------------------|
| (1) Raise | (11) Rear left |
| (2) Lower | (12) Rear right |
| (3) Power window main switch | (13) Power window lock |
| (4) Lowering relay | (14) Unlock |
| (5) Relay 1 | (15) Lock |
| (6) Automatic lowering switch | (16) Lamp 1 |
| (7) Switch 1 | (17) Passenger's switch |
| (8) Ground | (18) Rear left passenger's switch |
| (9) Automatic circuit | (19) Rear right passenger's switch |
| (10) Passenger | (20) Current detection resistor |

POWER WINDOW

Glass/Windows/Mirrors

MEMO

GW-4